
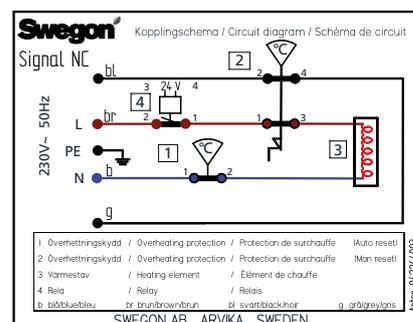
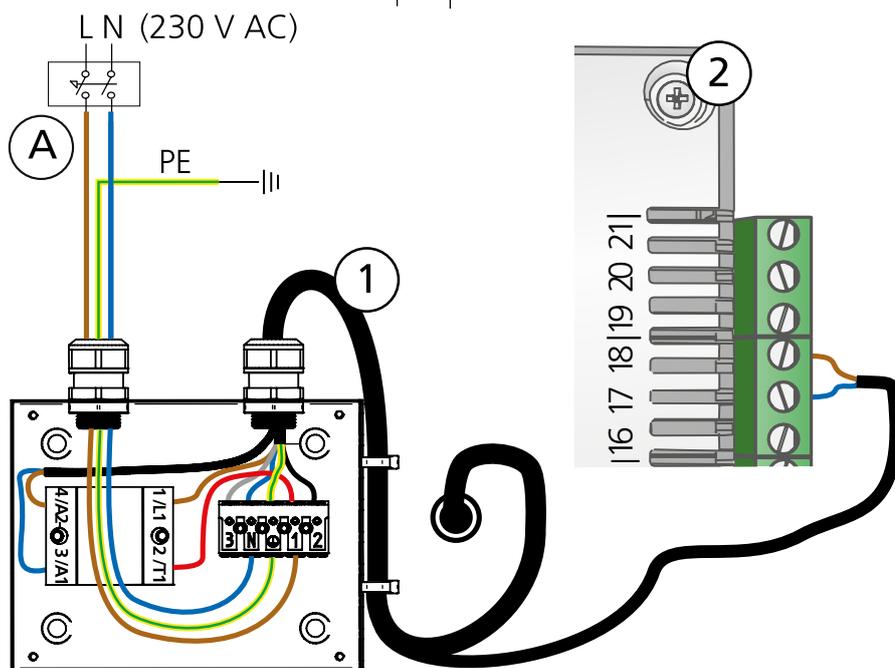


ADAPT Parasol b - X

Installation – Variant X

20160314

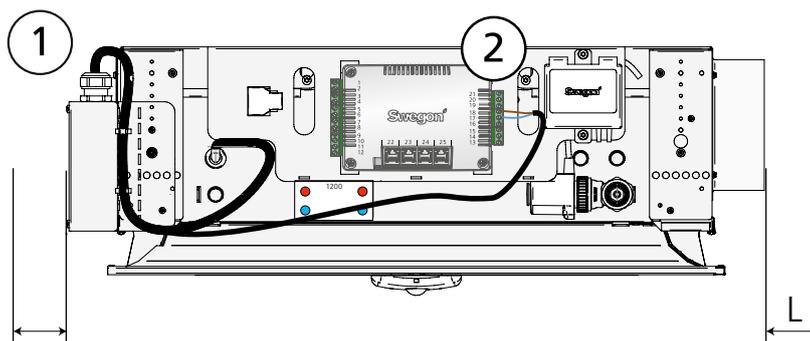

A: Allpolig brytare, brytavstånd >3mm
L: Min. avstånd till vägg >0,4m

A: Double-pole switch, contact separation >3mm
L: Min. distance to the wall > 0.4m



Children of less than 3 years should be kept away unless continuously supervised. Children aged from 3 years and less than 8 years shall only switch on/off the appliance provided that it has been placed or installed in its intended normal operating position and they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children aged from 3 years and less than 8 years shall not plug in, regulate and clean the appliance or perform user maintenance.

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

CAUTION — Some parts of this product can become very hot and cause burns. Particular attention has to be given where children and vulnerable people are present.

The heater must not be located immediately below a socket outlet.

WARNING: This heater is not equipped with a device to control the room temperature.

Do not use this heater in small rooms when they are occupied by persons not capable of leaving the room on their own, unless constant supervision is provided.

The heater must be installed at least 1,8m above the floor.