

# The home's ventilation and use of the cooker hood



**The central cooker hood** is connected to the building's centralised ventilation system and is used to remove cooking fumes from the home.

**The grease filters must be cleaned about twice a month!**

## Cooking mode

Press the cooking mode button,  so that cooking odours and fumes disappear via the cooker hood! The open function is time controlled for 30, 60 or 120 minutes. Pressing and holding the button engages 10 hours of summer night cooling, so that cool night air can be circulated into the home. Note that the function must not be used during the heating season!



## Lighting button

Switch on the lighting by pressing the button . You can adjust the brightness by pressing and holding. Lift your finger from the button when the brightness is ideal.

[Home's ventilation \(video\)](#)



[Use and service of the cooker hood \(video\)](#)

