

Recommendations for servicing and cleaning the cooker hood

Make sure that the cooker hood and grease filter are cleaned regularly. Otherwise the capacity for capturing cooking odours reduces significantly and the collected grease can represent a fire risk.



Clean the surfaces of the cooker hood with a damp cloth and mild dishwashing detergent. Do not use polish or solvents.



The grease filters must be cleaned about twice a month.



Loosen the filter by pressing in the lock button and pull down the filter.



Wash by hand or in a dishwasher (preferably without detergent).



Note washing in a dishwasher may cause the paint on the surface of the filter to change.



Refit the filters.
Check that the filters are located correctly.



[Use and service of the cooker hood \(video\)](#)