







ACTIONPAC LNS5 / SAFEGARD V5 USER OPERATING GUIDE

Issue 1 – Jan 2019

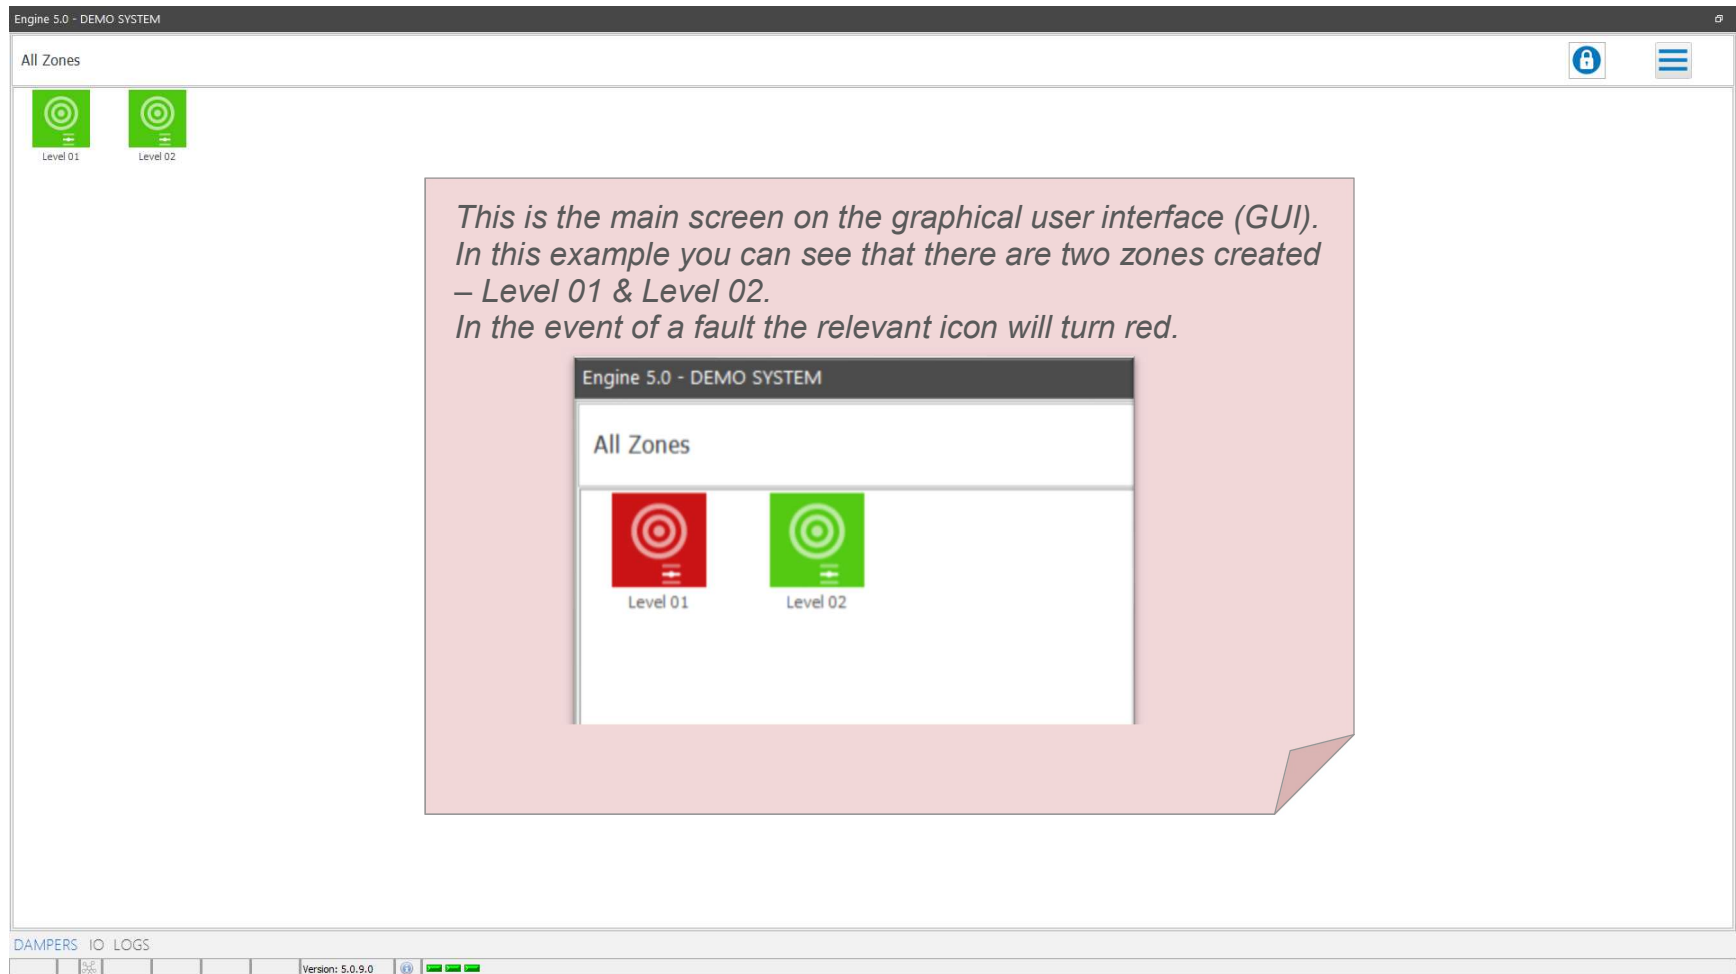

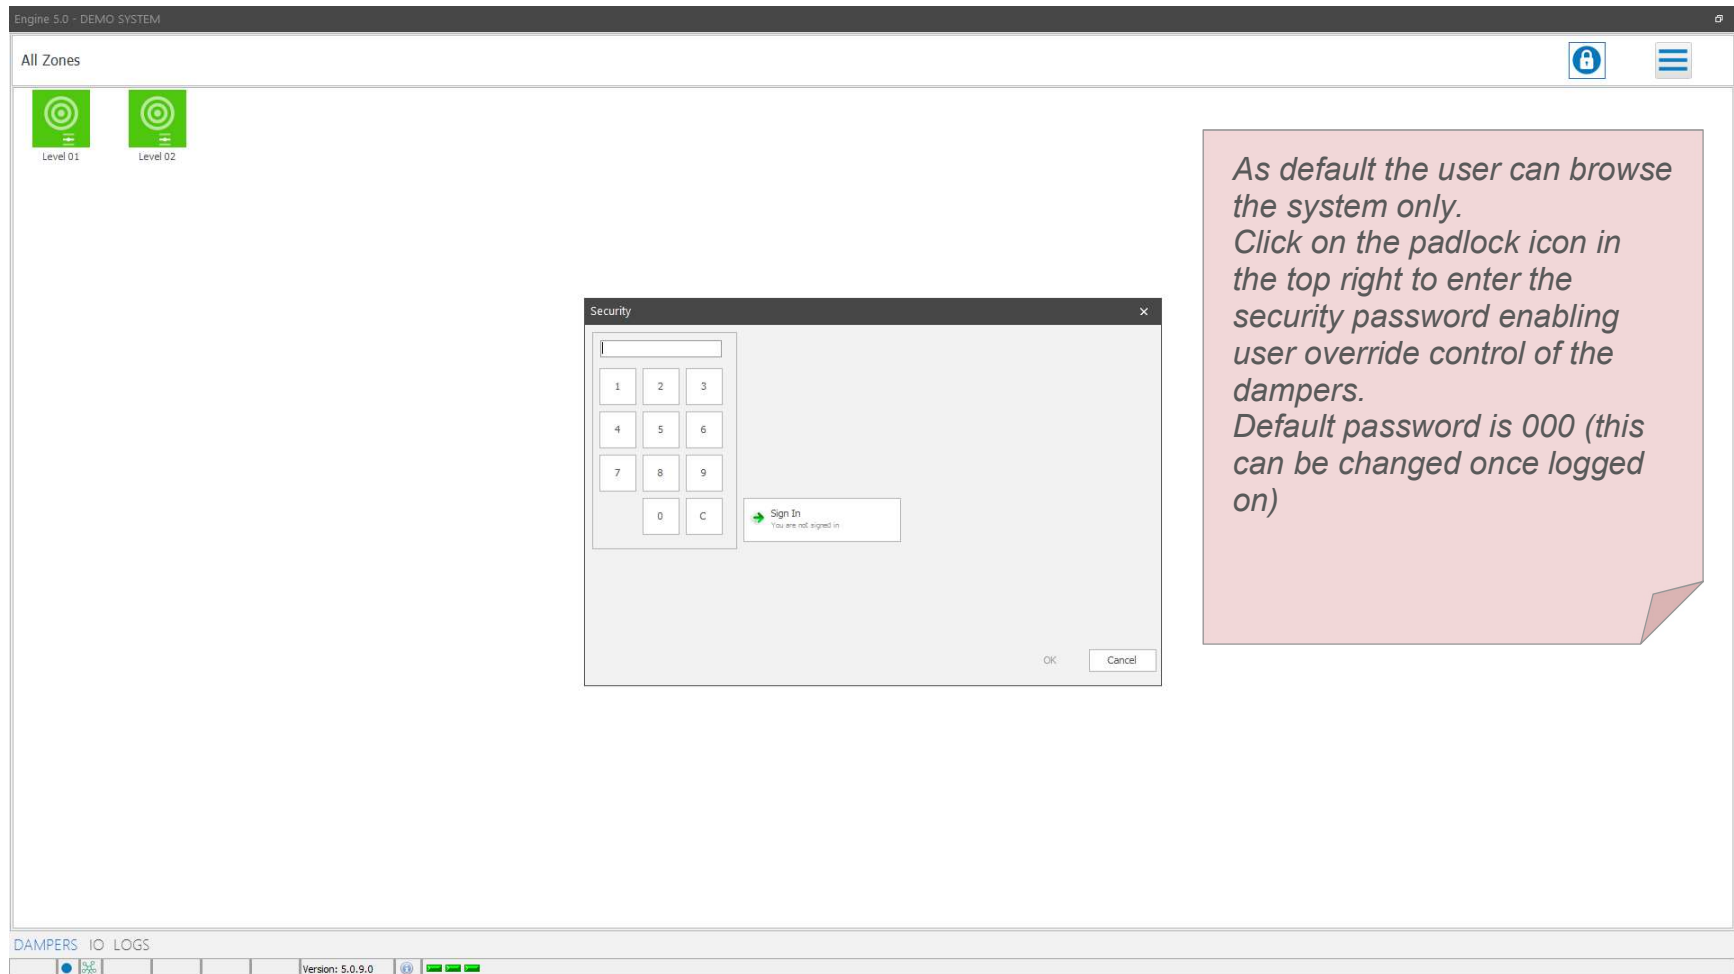

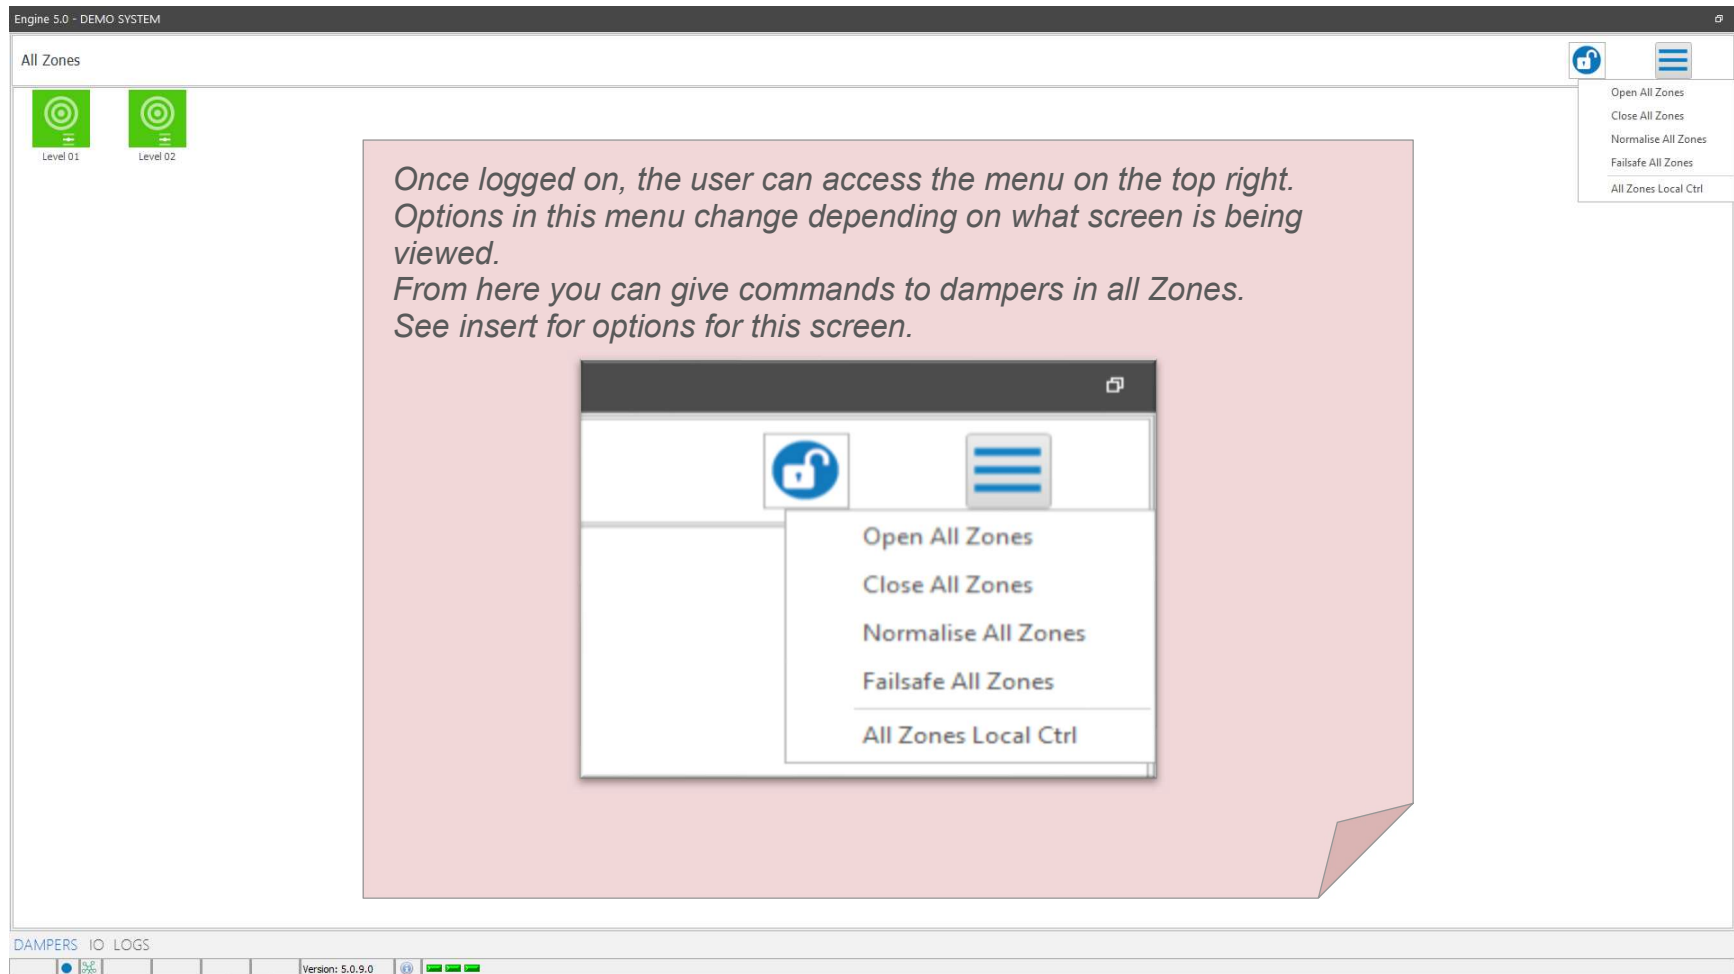

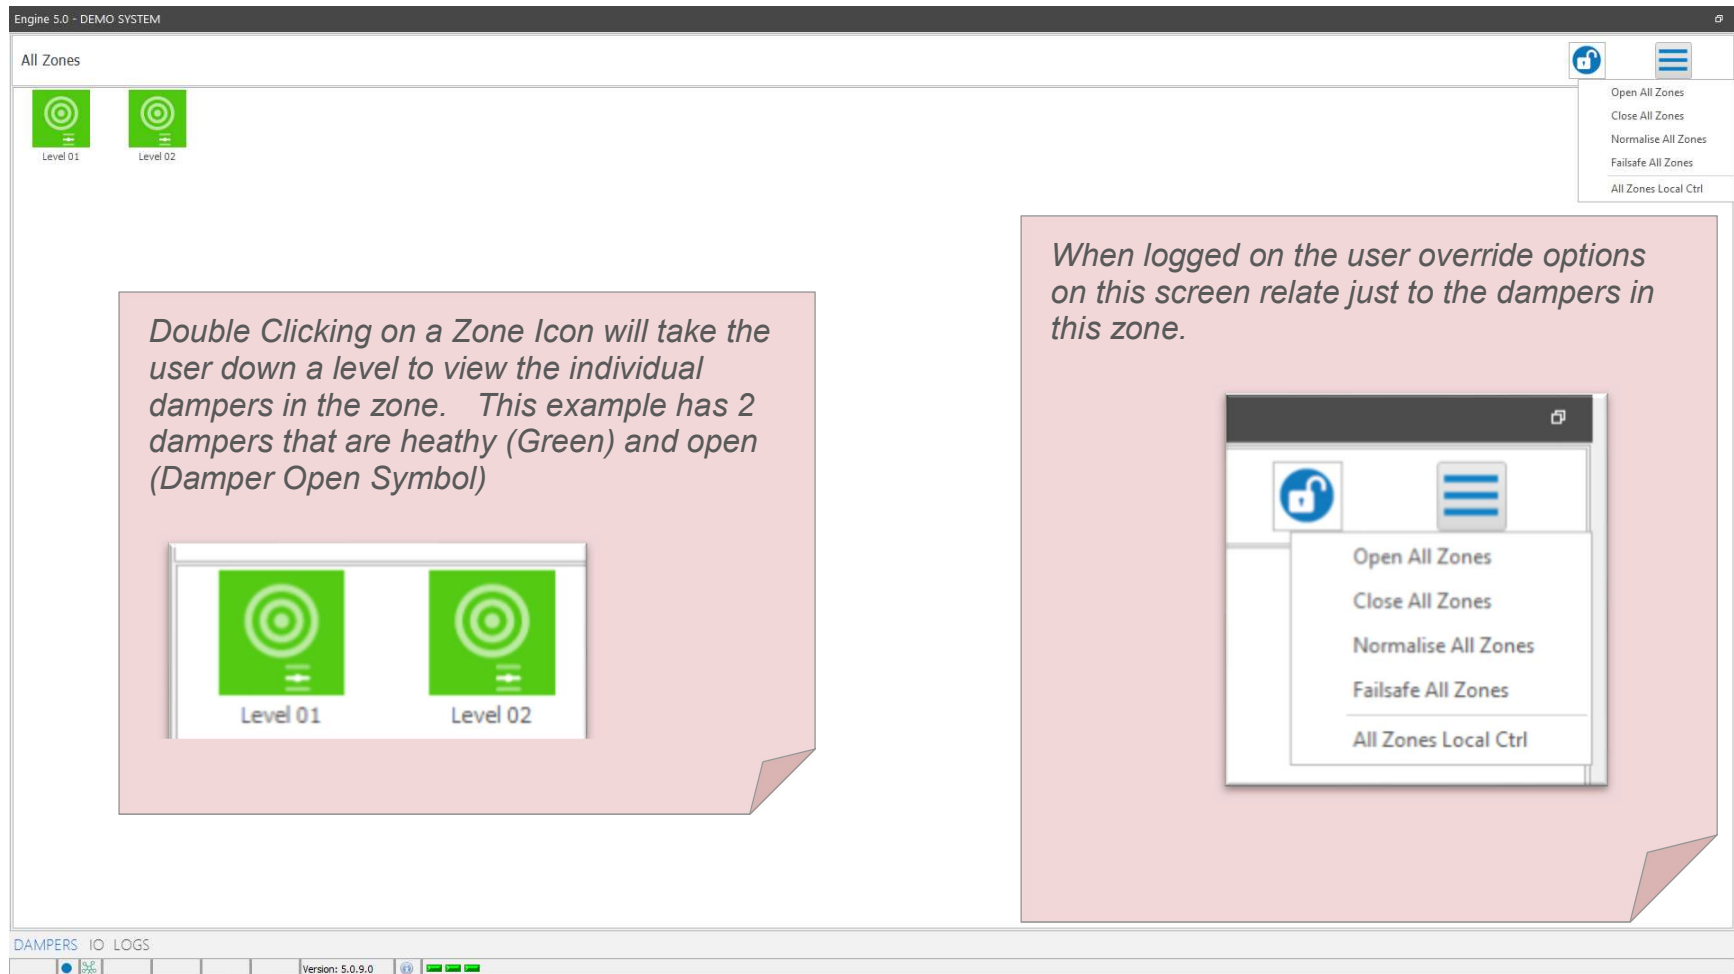

Engine 5.0 - DEMO SYSTEM

All IO

D1804 M 01

On the navigation at the bottom left of the screen the user can select IO to view all DIO devices installed on the system.
In this example there is only 1No DIO device installed.

DAMPERS

IO

LOGS

Properties

Property	Value
----------	-------

DAMPERS

IO

LOGS

Version: 5.0.9.0

8

Engine 5.0 - DEMO SYSTEM

DI804 M 01

Inputs

1

Level 1 Fire Alarm

2

Level 2 Fire Alarm

3

Override All

4

Input 4

5

Input 5

6

Input 6

7

Input 7

8

Input 8

Outputs

1

General Fault

2

Output 2

3

Output 3

4

Output 4

Properties

Information

Property	Value
Cable Tag	201 202
Contact	Normally Open
Enabled	True
Kind	Fire Alarm
Name	Level 1 Fire Alarm
INPUT NUMBER	1
Parent	DI804 M 01

Properties

Information

Property	Value
----------	-------

DAMPERS

IO

LOGS

Version: 5.0.9.0

Clicking on a DIO will take the user down a level to view all inputs and outputs on the DIO device graphically.

Clicking on an input will show its properties and how the cause and effect is programmed within the pane on the right hand of the screen

If an input or output is active it will be highlighted green.

Engine 5.0 - DEMO SYSTEM

Logs

FAULTS LOG

OUTPUTS LOG

Lock

Faults LogInputs LogOutputs LogArchive

Time Stamp	Device	Zone	Channel	Location	Description
03/05/2019 11:45:18	SFD-M-01	Level 01	Channel M01	Level 1 Area A	[Missing]

On the navigation at the bottom left of the screen the user can select LOGS to view all live logs relating to Faults, Inputs & Outputs.

DAMPERS IO LOGS

In this screen we can see the current live fault, detailing the time of the fault.

Once the fault is rectified, the live fault will disappear from this screen.

1 Records

DAMPERS IO LOGS

Version: 5.0.9.0

FAULT

10

