

GTKV_d

20260803

Installation

GTKV is screwed to the wall or ceiling, see Figure 1.

Commissioning

The airflow is adjusted via a damper in the duct system.

Maintenance

The extract air grille can be vacuumed using a brush attachment and, if required, cleaned with lukewarm water and detergent

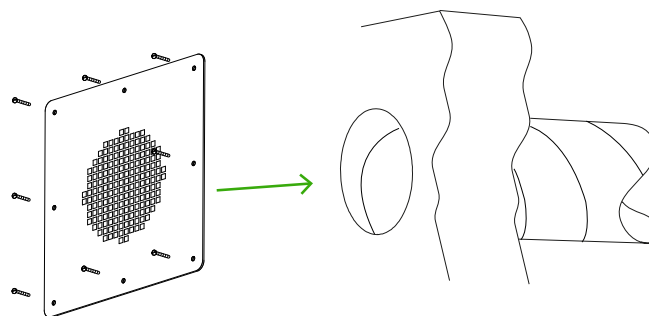


Figure 1. Installation.

Dimensions and weight

Size	Dimensions		Weight (kg)	
	A	Ød	2 mm	6 mm
200-200-125	200	125	0.6	0.5
250-250-125	250	125	0.9	0.8
250-250-160	250	160	0.9	0.8

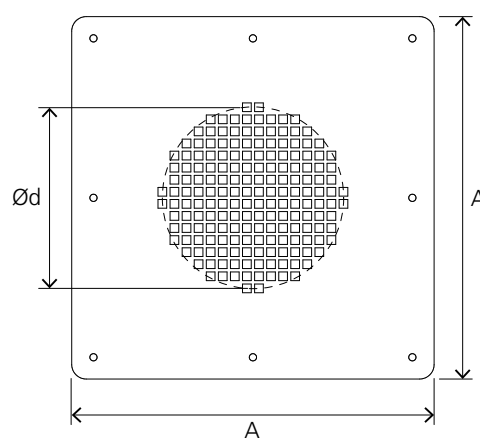


Figure 2. Dimensions, GTKV.