


GOLD SD 04-08 eff.var. 1 och 2/cap.var. 1 and 2, 11 eff.var./cap.var. 1


Med styrenhet/With control unit

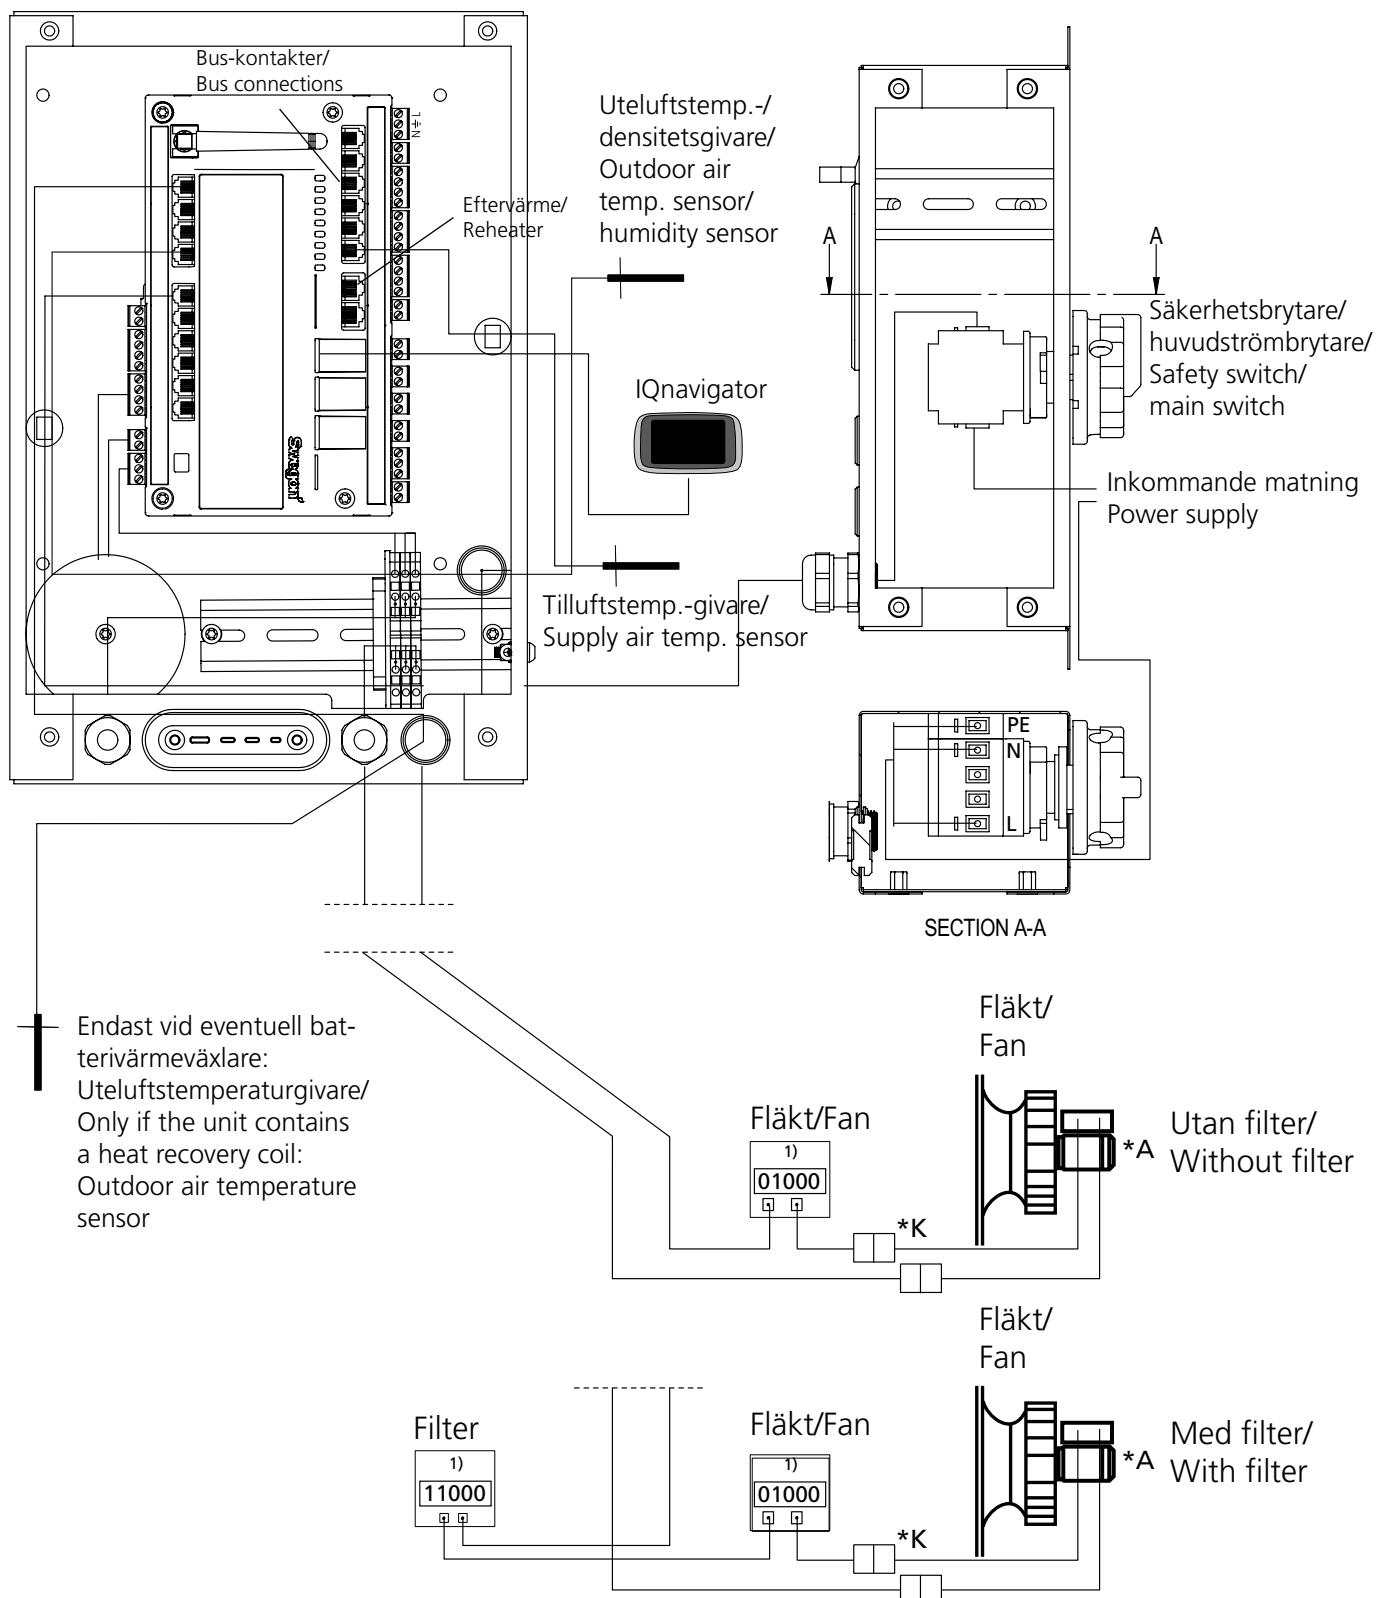

1) Inställning DIP-switch. Switch nr. 1-5. 1 = On, 0 = Off./
Settings DIP switch. Switch no. 1-5. 1 = On, 0 = Off.

GOLD SD 04-08 eff.var. 1 och 2/cap.var. 1 and 2, 11 eff.var./cap.var. 1

Utan styrenhet/Without control unit

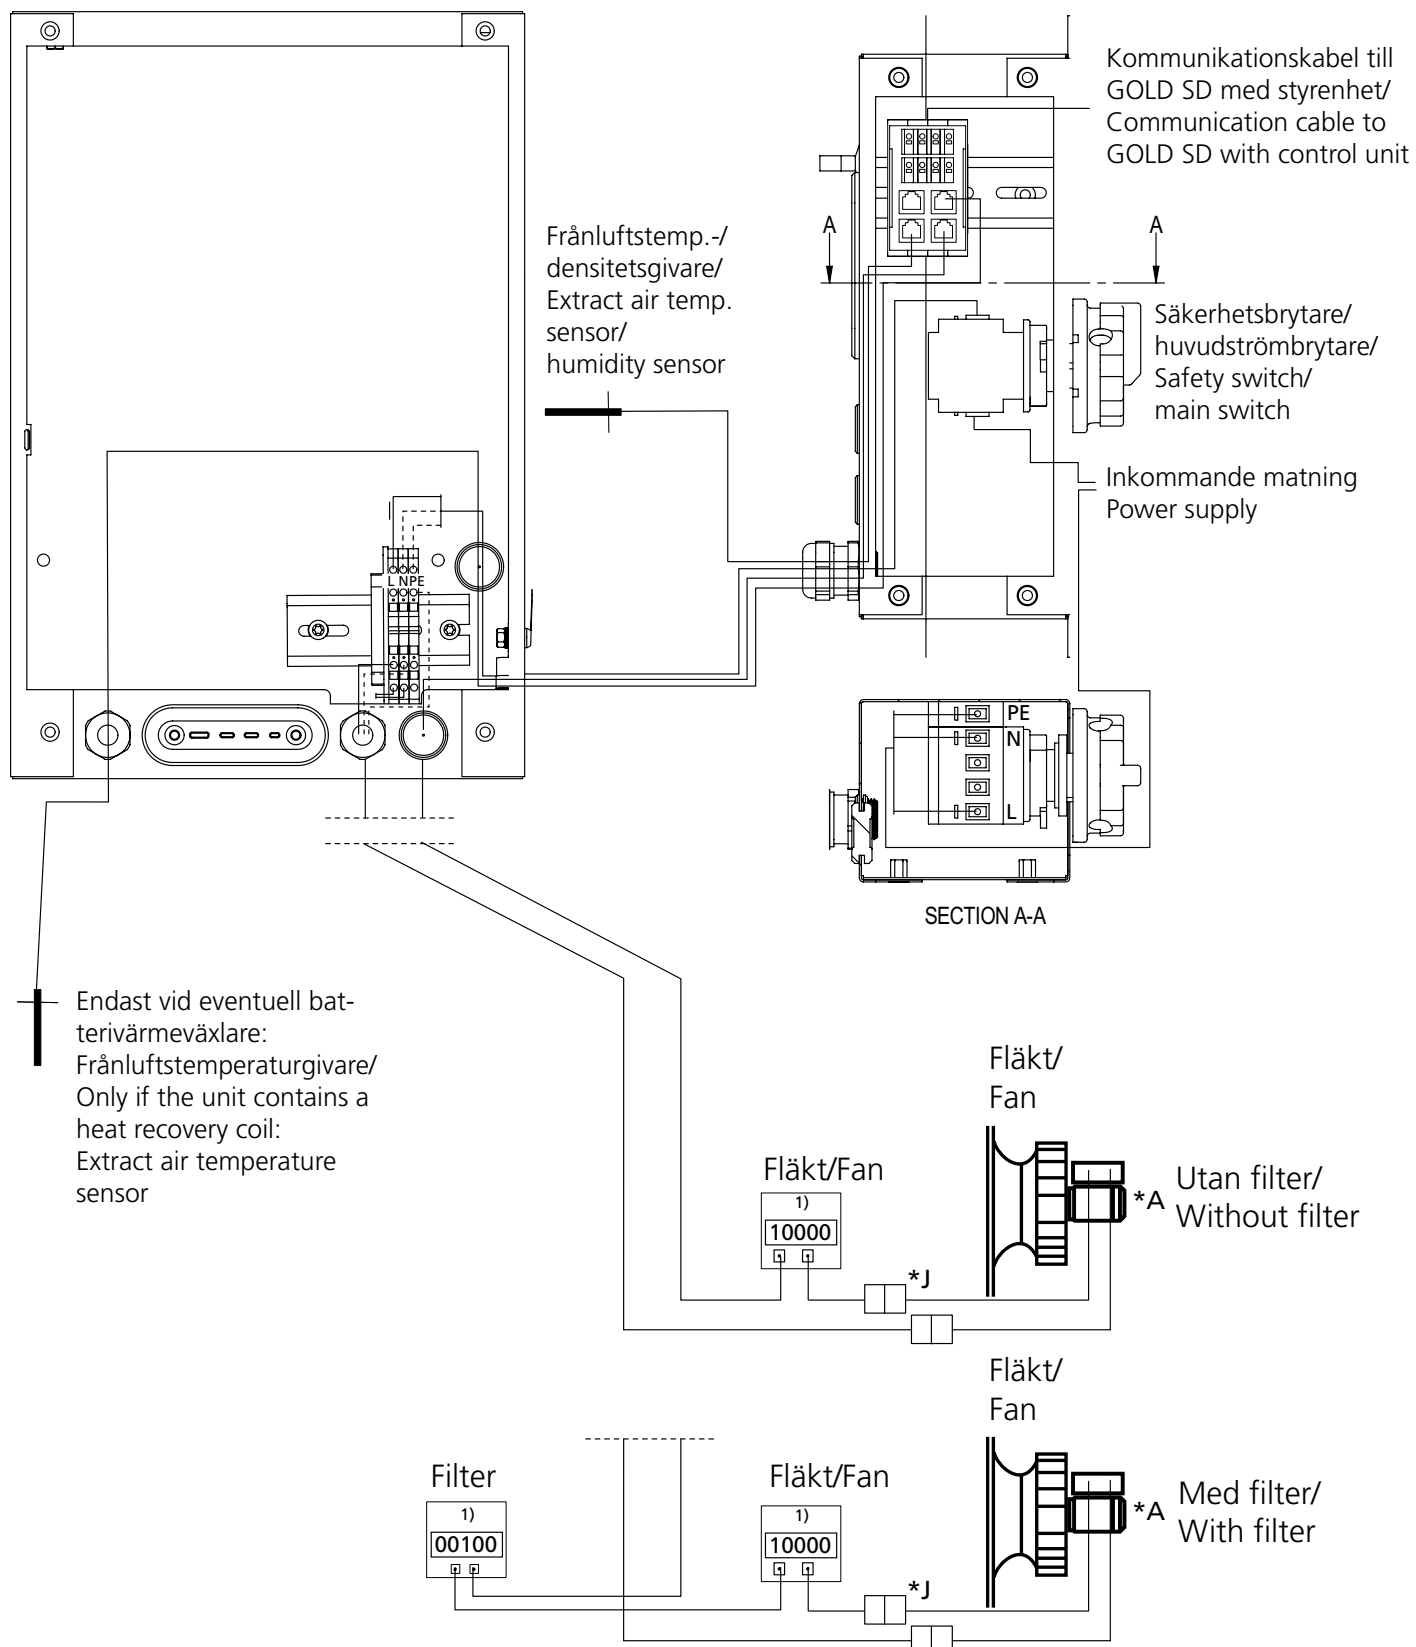


1) Inställning DIP-switch. Switch nr. 1-5. 1 = On, 0 = Off./
Settings DIP switch. Switch no. 1-5. 1 = On, 0 = Off.


GOLD SD 04-08 eff.var. 1 och 2/cap.var. 1 and 2, 11 eff.var./cap.var. 1

Sammankoppling av aggregat med styrenhet
till aggregat utan styrenhet/


Connecting AHU with control unit to AHU without control unit

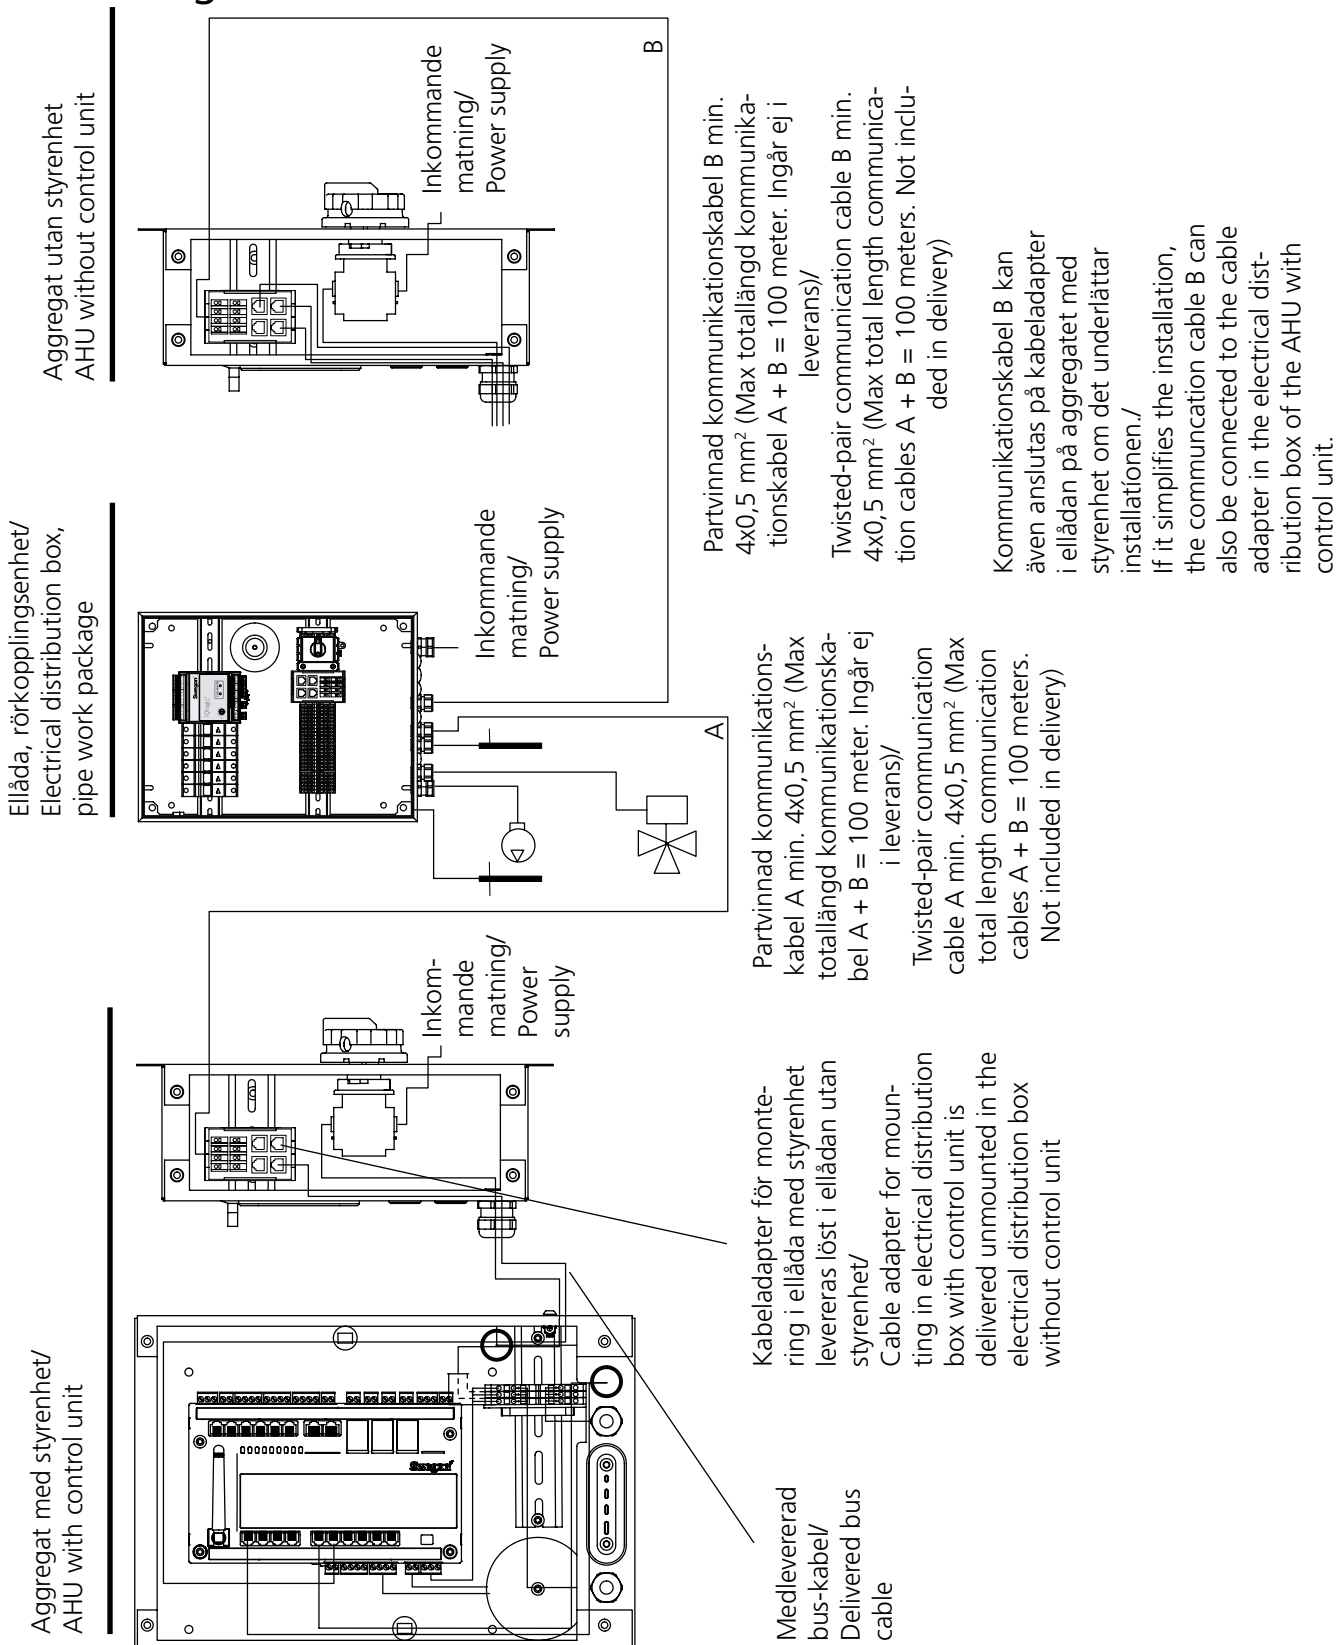

A: GOLD RX/PX/CX/SD04-07, 08/11 eff.var./cap.var. 1

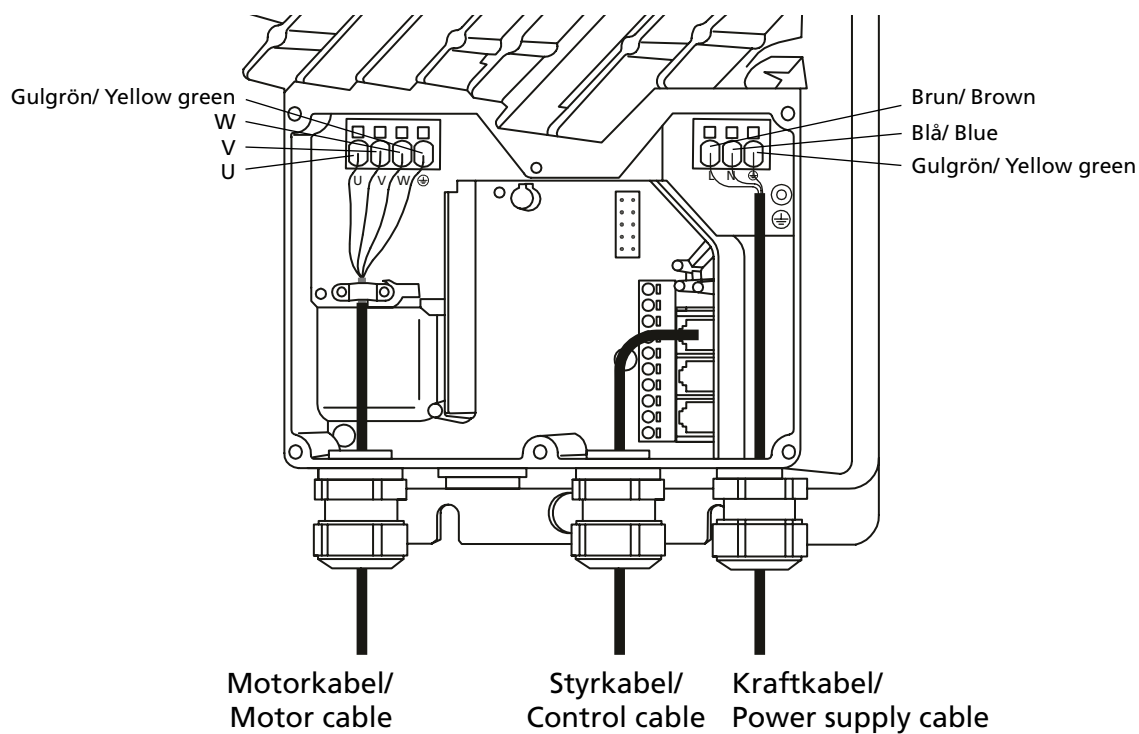

J: GOLD RX/PX/CX/SD 04-50

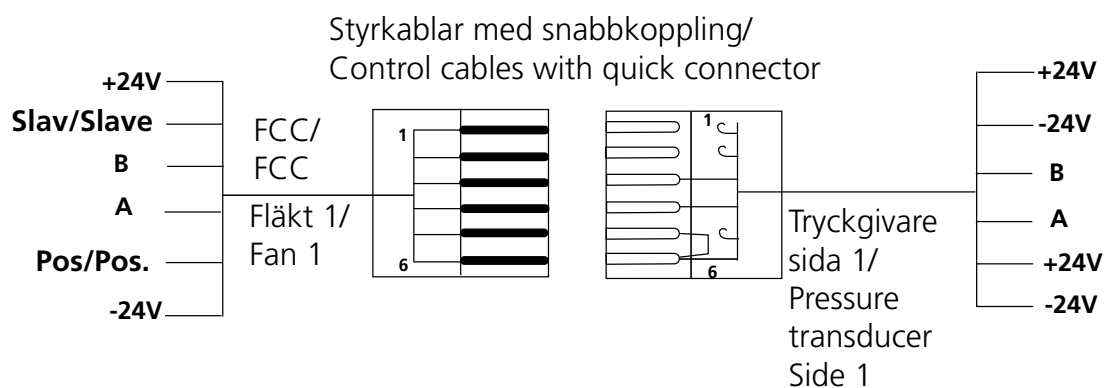

K: GOLD RX/PX/CX/SD 04-50

