

The advanced setup allows to activate certain features or to modify certain parameters:

To start the advanced setup, press simultaneously on 'SETUP' and 'ENTER' until the text ADVANCED SETUP appears on the screen. Principle: make selections via buttons ↑ ↓, then press 'ENTER'. The numbers are introduced digit by digit.

| Step | Text on screen | Description |
|-------|-----------------------|---|
| 1 | ENTER ACCES | If the access code procedure has been activated (see step 10) you will need to enter the access code before going any further. |
| 2 | CODE 0000 | |
| 3 | START TORQUE? | Fan starting torque can be modified here. (by default 10%) |
| 4 | 10% | |
| 5 | ARRET VENT SI | Stop the fan if pressure alarm is activated. (by default No) If Yes, after correction press RESET to restart fan. |
| 6 | ALARME Pa? N | |
| 7 | POST VENT? N | Possibility to activate a post-ventilation (continue to run the fan for some time after softstop has been activated). |
| 7.1 | TIME PV? 0090 sec | If you have selected Y on step 7 enter time of duration of post-ventilation in seconds. |
| 8 | FAN RUN TIME? N | Possibility to activate a runtime counter. How much time the control box has been running. This can help to generate a maintenance procedure, or to stop the fan once a certain runtime is reached. |
| 8.1 | TIME RESET? N | If Y was selected at step 8 you have here the possibility to set the runtime counter at 0. |
| 8.2 | DISPLAY TIME? N | If Y was selected at step 8 you have here the possibility to display the actual runtime (use ↓↑ keys). |
| 8.3 | SERVICE ALARM? N | If Y was selected at step 8 you have here the possibility to request a runtime alarm service or not. |
| 8.3.1 | TIME ? 000000 h | If Y was selected at step 8.3 you have here the possibility to set the runtime (in hours) after which a maintenance alarm must be activated. |
| 8.4 | STOP FAN? N | If Y was selected at step 8 you have here the possibility to request the fan to stop after a certain runtime. |
| 8.4.1 | TIME ? 000000 h | If Y was selected at step 8.4 fill in the runtime (in hours) after which you want the fan to be automatically stopped. |
| 9 | DISPLAY ALARM ONLY? N | Possibility to only display the alarms on the screen. "OK" will then be displayed when no alarm is activated. |
| 10 | ACCESS CODE? N | Possibility to activate an access code to control the access inside the advanced setup. |
| 10.1 | CODE 0000 | If Y is selected at step 10, enter here the access code to advanced setup. |
| 11 | FACTORY RESET? N | Possibility to make a complete reset of all the parameters of the CB. If you chose Y all the factory parameters will be regenerated. |
| 12 | END SETUP | End of advanced setup. |