

# Swegon CASA™ Rock

FI.C201-121-9

2009.06.04

Instructions for the operation and maintenance of the Swegon CASA Rock cooker hood

## Important!

### Cooker hood connected to the ventilation system

The ventilation system can be switched on/off and its four fan speeds can be set from the cooker hood. The ventilation capacity of the cooker hood can be boosted by a change in the shut-off damper setting.


The home should be ventilated continuously to ensure the well-being of the residents and for avoiding moisture damage to the building.

**The ventilation should only be switched off while maintenance work is in progress.**

### Cooker hood connected to a power roof ventilator

The controls on the cooker hood are used for setting the four fan speeds of power roof ventilator and switching it on and off. To use the cooker hood, press the timer button to open the shut-off damper.

Select an appropriate fan speed for cooking. Switch off the cooker hood when you have finished using it.

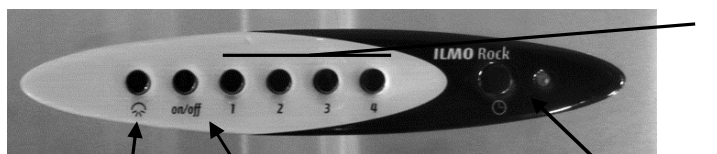

**Cooker hood light switch**  
On/off

**On/Off**  
N.B.! The cooker hood models that operate continuously cannot be switched off.

### Ventilationssystemets fläkthastighetsreglage

(The ventilation system is controlled from the cooker hood)

1. Lowest speed. Used when no one is at home
- 2 -3. Normal speed. The basic speeds of the ventilation system.
4. Boost speed. Used for cooking, showering, drying laundry, or if a greater number of persons are present.

### Timer button for the cooker hood's shut-off damper (electrically actuated)

When cooking, the ventilation capacity of the cooker hood is increased by pressing the timer button. The indicating lamp for boosted operation lights up and an electric motor opens the shut-off damper. The damper closes automatically after 60 minutes or when you press and hold the timer button pressed in for more than two seconds.

**Caution: Flambéing food below the cooker hood is not permitted!**

## Maintenance

Clean the cooker hood regularly with dishwashing detergent. Use a suitable detergent for cooker hoods with stainless steel surfaces. Never use aggressive detergent.

### Filter


Release the catches that hold the grease filter by turning the knobs a quarter of a turn anticlockwise. Lower the front edge of the grease filter first.

The filter can be washed by hand with dishwashing detergent or in a dishwasher.

### Lamps

If a lamp needs to be replaced, pull it out of its base.

Type of halogen lamp: GU 5.3, max 4 x 20 W. Light beam: 60 degrees.

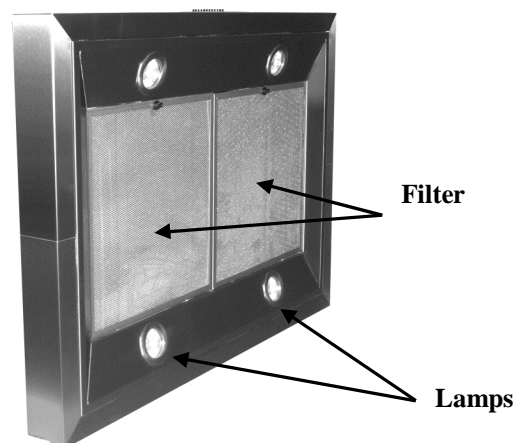

**Swegon**

www.swegon.com/casa