

## Instructions for the operation and maintenance of the Swegon CASA Premium cooker hood

### Important!

The ventilation system can be switched on/off and its three fan speeds can be set from the cooker hood. The ventilation capacity of the cooker hood can be boosted by a change in the shut-off damper setting.

The home should be ventilated continuously to ensure the well-being of the residents and for avoiding moisture damage to the building.

**The ventilation should only be switched off while maintenance work is in progress.**

### Cooker hood timer button


The ventilation capacity of the cooker hood can temporarily increase if you press the timer button. Doing so causes the indicating lamp to light up and the cooker hood's shut-off damper to open. The duration of the boost period is governed by the number of times you press the button.

- 1 press → 30 minutes
- 2 presses → 60 minutes
- 3 presses → 120 minutes
- 4 presses → cancels boost mode

**Caution: Flambéing food below the cooker hood is not permitted!**

### The ventilation system controls

- 1. Away** (one indicating lamp, press once). Can be used when no one is at home.
- 2. At home** (two indicating lamps, press twice). Normal fan speed for ventilation.
- 3. Boost operation** (three indicating lamps, press three times). Can be used while cooking, showering, drying laundry or if a large number of persons are present.

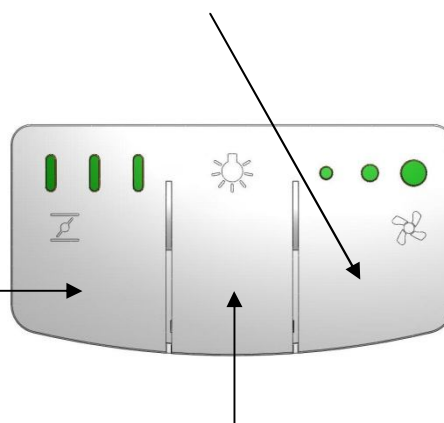

**Cooker hood light switch**  
On/Off:

### Maintenance

Clean the cooker hood regularly with dishwashing detergent. Use a suitable detergent for cooker hoods with stainless steel surfaces. Never use aggressive detergent.

### Filter

The filter can be removed and washed by hand with dishwashing detergent or in a dishwasher.

### Fluorescent lamp

If the lamp needs to be replaced, remove the screws that secure the glass cover, remove the cover and pull the lamp out of its holder.

Type of fluorescent lamp: PL 11 (11 W)

