

To increase the temperature



1. Press ▲ Up until the desired temperature is shown.



2. Press OK or wait 3 seconds.

To decrease the temperature



1. Press ▼ Down until the desired temperature is shown.



2. Press OK or wait 3 seconds.

To increase the airflow



1. Press ► Right until the desired airflow is shown.



2. Press OK or wait 3 seconds.

To decrease the airflow














1. Press ◀ Left until the desired airflow is shown.



2. Press OK or wait 3 seconds.

Symbols

	= Heating.		= Occupancy.
	= Cooling.		= The CO ₂ content has exceeded the preset limit value.
	= Fully charged battery.	AUTO	= Automatic operating mode.
	= Half-charged battery.	ECON	= Economy operating mode.
	= Empty battery.	STOP	= Standby mode.
	= Open window.	EMERG	= Emergency mode.
	= Low airflow.		
	= Normal airflow.		
	= High airflow.		

Energy saving

The system includes the ECON operating mode for saving energy. It is automatically activated when no one has been in the room for a certain period of time.

CONDUCTOR W4 returns to the AUTO operating mode as soon as someone enters the room.

Contact and information

Get in touch with the person responsible for the building if the indoor climate system does not operate as it should or if the battery has run out of power.

Information about the CONDUCTOR W4 and how to contact Swegon is available at our website: www.swegon.com