

# COLIBRI Wall

Wall air diffuser with nozzles for supply air and flush mounting



## QUICK FACTS

- Adjustable nozzles
- 100% flexible distribution pattern
- Cleanable
- Simple commissioning
- Used together with ALV commissioning box
- Standard colour White RAL 9003
  - 5 alternative standard colours
  - Other colours upon request

AIR FLOW - SOUND PRESSURE ROOM (Lp10A) *						
COLIBRI Wall Size	ALV Size	25 dB(A) l/s m³/h	30 dB(A) l/s m³/h	35 dB(A) l/s m³/h		
300-150	300-150-100-B	15	54	20	72	28
400-150	400-150-125-B	24	86	28	101	40
400-200	400-200-160-B	33	119	41	148	50
550-250	550-250-200-B	50	180	60	216	75
550-300	550-300-250-B	62*	223*	70	252	85
						306

The data specified in the table is applicable to 50 Pa total pressure, with commissioning box ALV with rear connection.

\*At total pressure 35 Pa.

\*) Lp10A = Sound pressure incl. A-filter with 4 dB room attenuation and 10 m<sup>2</sup> room absorption area.

# Contents

<b>Technical description .....</b>	<b>3</b>
Design .....	3
Materials and surface treatment.....	3
Accessories .....	3
Planning .....	3
Installation .....	3
Commissioning .....	3
Maintenance.....	3
Environment .....	3
<b>Sizing .....</b>	<b>5</b>
Sound data.....	5
Sizing diagram .....	6
<b>Dimensions and weight.....</b>	<b>7</b>
<b>Specification.....</b>	<b>9</b>
<b>Specification text.....</b>	<b>9</b>

# Technical description

## Design

Rectangular supply air diffuser for installation in a wall. The air diffuser, which is easy to dismantle, is equipped with aerodynamically shaped nozzles that are rotatable.



## Materials and surface treatment

The air diffuser face is made of sheet steel and is painted.

- Standard colour:
  - White semi-gloss, lustre 40, RAL 9003/NCS S 0500-N
- Alternative standard colours:
  - Silver gloss, lustre 80, RAL 9006
  - Grey aluminium gloss, lustre 80, RAL 9007
  - White semi-gloss, lustre 40, RAL 9010
  - Black semi-gloss, lustre 35, RAL 9005
  - Grey semi-gloss, lustre 30, RAL 7037
- Non-painted finish and other colours available on request.

The nozzles are made of plastic (PP-polypropylene).

## Accessories

### Commissioning box

#### ALV

Made of galvanised sheet steel and contains a removable commissioning damper, fixed measurement tapping and air distribution baffle. Available with two connection options: rear and side connection. Tightness class C on the housing according to SS-EN 12237 and VVS/AMA.

#### Cover plate

#### ALVT 1

For a fitted and aesthetic installation of the ALV commissioning box.

#### Planning

Each individual nozzle is rotatable through 360°. This entails a large number of alternative air distribution patterns with no change in the pressure drop or sound level. For example, scope is available for simultaneous horizontal and vertical air diffusion.

If the diffuser is placed close to an inner corner, a satisfactory distribution pattern for the room can be maintained with the aid of the nozzles. For this purpose, use the optional 45° distribution pattern.

The ALV commissioning box is well-suited for installation in 1200 mm plasterboard walls (600 mm centre to centre) and 900 mm plasterboard walls (450 mm centre to centre).

## Installation

Installation and dismantling can be seen from figure 1.

1. Prepare an opening in the wall according to the dimensions specified.
2. Place the commissioning box containing the damper insert, air distribution plate and air distribution baffle in the opening.

3. Apply sealing compound between the commissioning box and the mounting frame to prevent air leakage. Insert the mounting frame into the commissioning box and secure it with screws in the short sides to the commissioning box and to the wall structure.
4. Press the diffuser face into the mounting frame.

## Commissioning

Commissioning should be carried out with the diffuser face mounted. The measuring tube and the damper adjustment cords are pulled out of the air diffuser through a nozzle. A pressure gauge is connected to the measuring tube. The desired commissioning pressure can be calculated using the rated coefficient of performance (K-factor) of the air diffuser. The damper is set to the correct blade position, a commissioning knot is tied in the damper cords to indicate the damper position. Then the cords are locked against the locking screw in the air distribution baffle.

The K-factor is specified on the product's identification label, as well as in the relevant commissioning instructions at [www.swegon.com](http://www.swegon.com).

## Maintenance

The air diffuser can be cleaned, if necessary, using luke-warm water with dishwashing detergent added, or by vacuum cleaning using a brush nozzle. The duct system can be accessed by dismantling the diffuser face, withdrawing the air distribution baffle, moving the air distribution plate to the side and turning the damper and withdrawing it from the inlet holder (see figure 1).

## Environment

The Building Materials Declaration is available from [www.swegon.com](http://www.swegon.com).

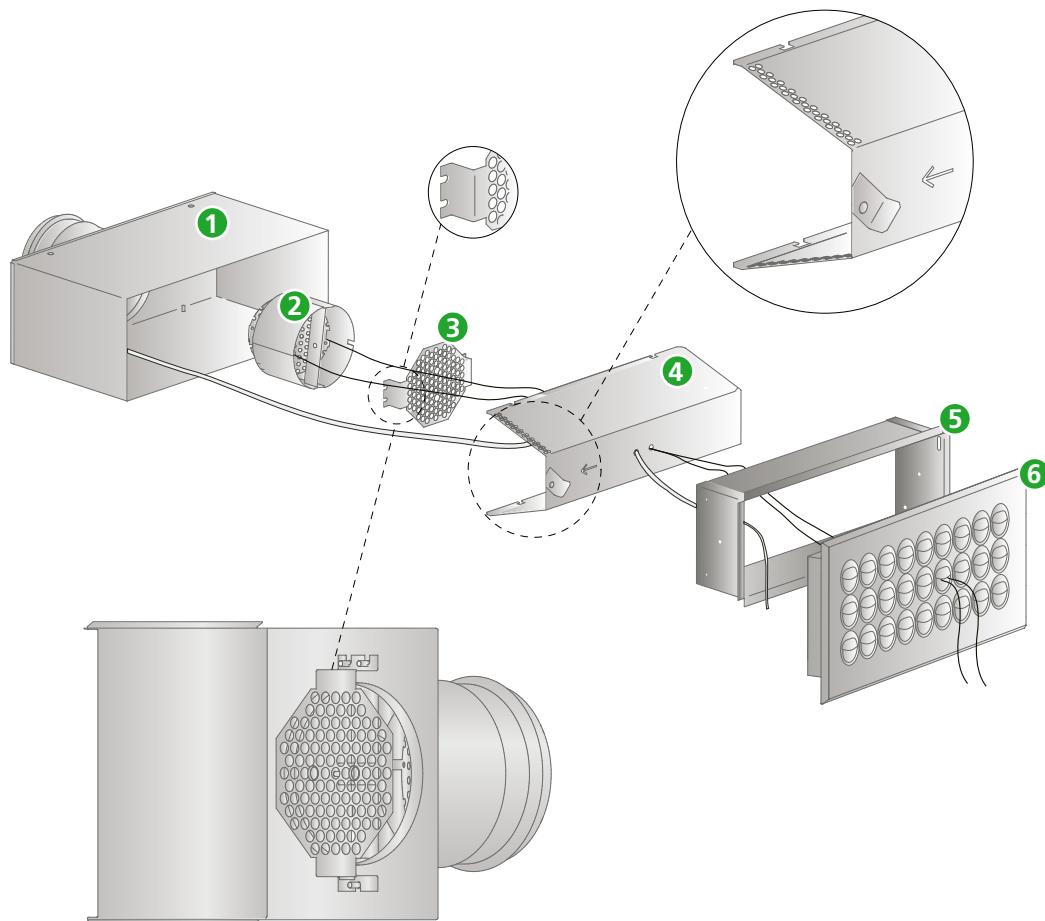


Figure 1. Installation.

1. Commissioning box.
2. Damper insert, bayonet catch.
3. Octagonal air distribution plate, enlarged image shows the locking device.
4. Air distribution baffle, enlarged image shows the locking device.
5. Mounting frame.
6. Diffuser face.

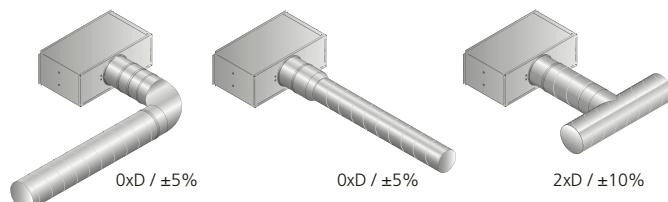


Figure 2. Installation options, applicable to all connections (B, K).

# Sizing

- Sound pressure level dB(A) applies to rooms with an equivalent sound absorption area of 10 m<sup>2</sup>.
- Sound attenuation ( $\Delta L$ ) below is shown in the octave band. Orifice attenuation is included in the values.
- The throw length  $l_{0,2}$  is measured under isothermal discharge conditions.
- The diagrams illustrate data for COLIBRI Wall mounted with its top edge 200 mm from the ceiling.
- The recommended max. permissible temperature below room temperature is 12 K at default nozzle setting.
- To calculate the air stream diffusion, air velocities in the occupied zone or sound levels with other dimensions, please refer to our calculation software available on [www.swegon.com](http://www.swegon.com).

$L_w$  = Sound power level

$L_{p10A}$  = Sound pressure level dB(A)

$K_{ok}$  = Correction for producing the  $L_w$  values in the octave band

$L_w = L_{p10A} + K_{OK}$  gives the frequency divided octave band

## Sound data

### COLIBRI Wall + ALV – Supply air

#### Sound power level $L_w$ (dB)

Table  $K_{OK}$

Size	Mid-frequency (octave band) Hz							
	63	125	250	500	1000	2000	4000	8000
300-150	-3	6	5	-1	0	-6	-17	-23
400-150	-2	5	5	1	0	-7	-16	-17
400-200	0	4	4	0	1	-6	-20	-22
550-250	-3	4	3	1	0	-8	-18	-19
550-300	1	3	2	2	1	-12	-26	-24
Tol. ±	2	2	2	2	2	2	2	2

#### Sound attenuation $\Delta L$ (dB)

Table  $\Delta L$

Size	Mid-frequency (octave band) Hz							
	63	125	250	500	1000	2000	4000	8000
300-150	20	12	8	1	6	13	7	7
400-150	18	8	7	5	6	7	10	12
400-200	14	11	4	3	5	7	5	5
550-250	11	11	3	4	2	3	5	8
550-300	13	9	2	3	5	3	4	5
Tol. ±	2	2	2	2	2	2	2	2


## Sizing diagram

### Air flow – Pressure drop – Sound level – Throw length

- The throw length  $l_{0,2}$  is measured under isothermal discharge conditions.
- The diagrams illustrate data for COLIBRI Wall mounted with its top edge 200 mm from the ceiling.
- The recommended max. permissible temperature below room temperature is 12 K at default nozzle setting.
- To calculate the air stream diffusion, air velocities in the occupied zone or sound levels in rooms with other dimensions, please refer to our calculation software available on [www.swegon.com](http://www.swegon.com).

### Supply air - Air diffuser with commissioning box


#### COLIBRI Wall 300-150 + ALV 300-150-100-B/K

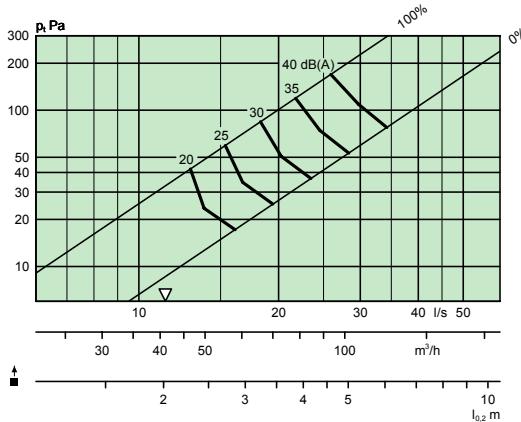


#### COLIBRI Wall 400-150 + ALV 400-150-125-B/K

- The diagrams should not be used for commissioning.
- $\nabla =$  Min. air flow required for obtaining sufficient commissioning pressure.
- The dB(A) values apply to rooms with normal acoustic absorption, 4 dB room attenuation/10 m<sup>2</sup> equivalent room absorption area.
- The dB(C) value is normally 6-9 dB higher than the dB(A) value.
- Nozzle setting for long throw length is extended by  $l_{0,2}$  factor  $1.5 \times l_{0,2}$ . See figure Nozzle settings.


#### COLIBRI Wall 400-150 + ALV 400-150-125-B/K

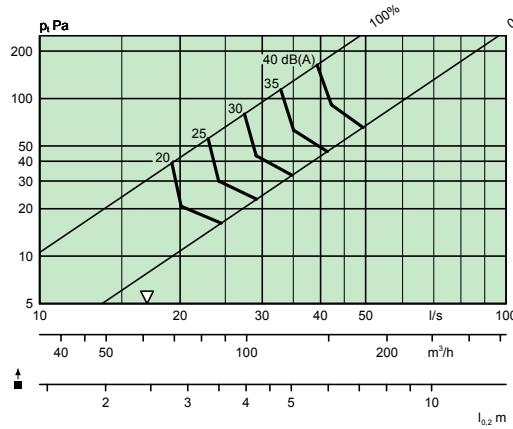


#### COLIBRI Wall 400-200 + ALV 400-200-160-B/K

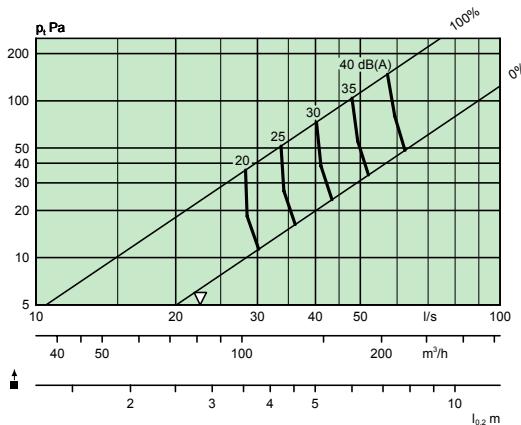

#### COLIBRI Wall 550-300 + ALV 550-300-250-B/K

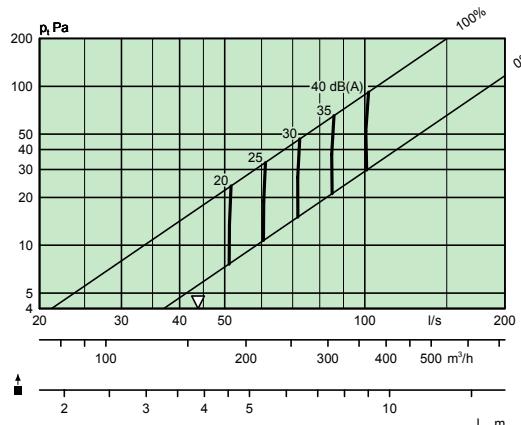

#### COLIBRI Wall 550-250 + ALV 550-250-200-B/K

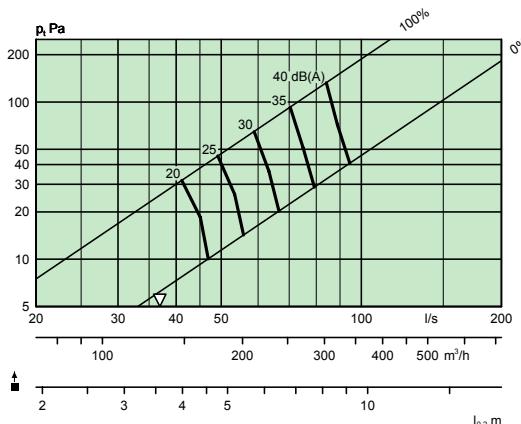

# Dimensions and weight

## COLIBRI Wall and commissioning box ALV - rear connection

Size	Dimensions (mm)								Weight, diffuser (kg)	Weight, diffuser incl. ALV (kg)
	A	B	ØD	F	G	K	I x J			
300-150	330	180	99	295-375	225-305	70	305 x 155	0.7	3.1	
400-150	430	180	124	295-375	225-305	70	405 x 155	0.9	3.9	
400-200	430	230	159	315-395	225-305	90	405 x 205	1.0	4.5	
550-250	580	280	199	360-440	251-331	110	555 x 255	1.4	6.4	
550-300	580	330	249	385-465	251-331	134	555 x 305	1.6	7.5	

Size of opening = I x J

CL = Centre line

## COLIBRI Wall and commissioning box ALV - short side connection

Size	Dimensions (mm)								Weight, diffuser (kg)	Weight, diffuser incl. ALV (kg)
	A	B	ØD	G2	K	L	M	I x J		
300-150	330	180	99	270-350	77	145-225	195-275	305 x 155	0.7	3.3
400-150	430	180	124	331-411	77	180-260	240-320	405 x 155	0.9	4.4
400-200	430	230	159	331-411	95	145-225	225-305	405 x 205	1.0	5.0
550-250	580	280	199	371-451	114	145-225	245-325	555 x 255	1.4	7.3
550-300	580	330	249	425-505	138	145-225	275-355	555 x 305	1.6	8.7

Size of opening = I x J

CL = Centre line

## ALVT 1

Size	Dimensions (mm)		
	A	B	N
300-150	330	180	230
400-150	430	180	230
400-200	430	230	230
550-250	580	280	255
550-300	580	330	255

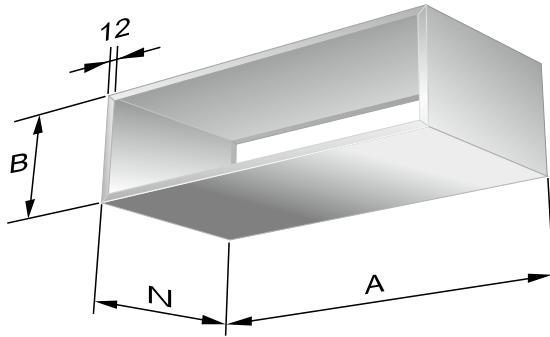


Figure 3. Cover plate ALVT 1.

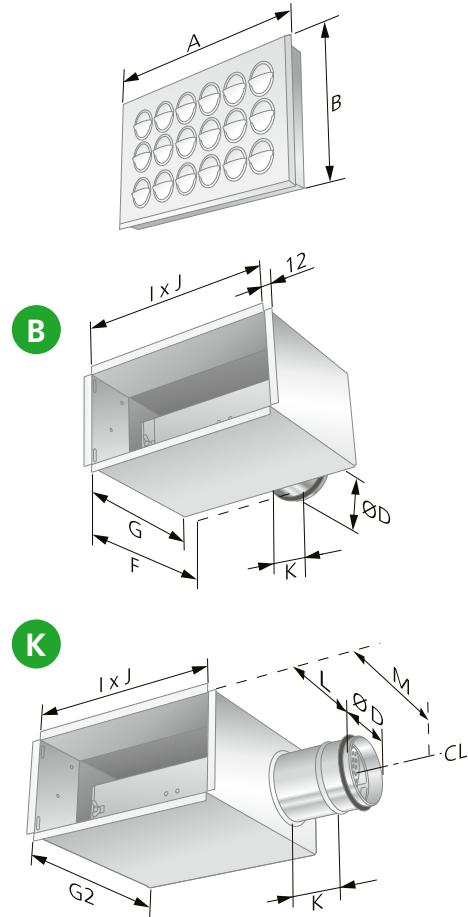


Figure 4. Dimensions, COLIBRI Wall and commissioning box ALV.

B = Rear connection.

K = Connection on short side.

CL = Centre line.

## Nozzle settings

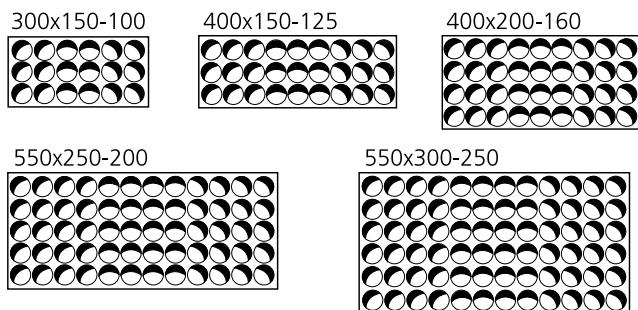


Figure 5. Standard nozzle settings, short throw length.

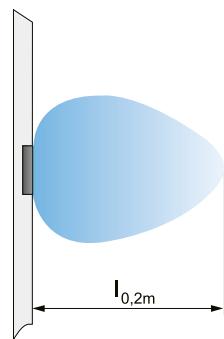


Figure 7. Isovel. Standard distribution pattern, short throw length.

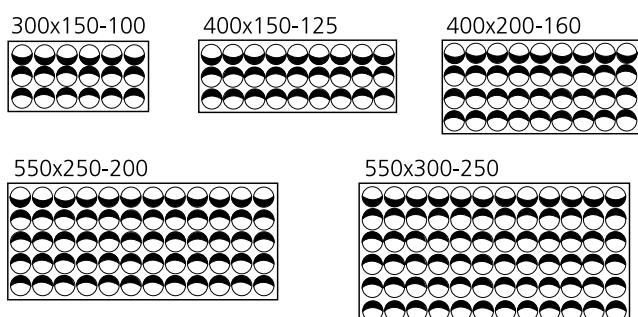


Figure 6. Nozzle settings, long throw length.

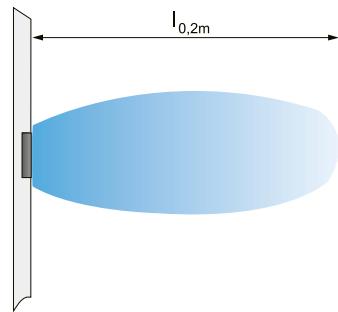


Figure 8. Isovel. Distribution pattern, long throw length.

# Specification

## Product

Rectangular wall diffuser  
with nozzles

COLIBRI W c aaa -bbb

Version

Nominal width in mm:  
300, 400, 550

Nominal height in mm:  
150, 200, 250, 300

Standard range

Size: 300-150  
400-150  
400-200  
550-250  
550-300

## Accessories

### ALV

Commissioning box

ALV e aaa-bbb-ccc -d

Version

For sizes:  
300-150 ALV 300-150-100  
400-150 400-150-125  
400-200 400-200-160  
550-250 550-250-200  
550-300 550-300-250

Connection options:

B = Rear

K = Short side

## Cover plate

Cover plate

ALVT 1 e aaa-bbb -d

Version:

Size: 300-150  
400-150  
400-200  
550-250  
550-300

Connection options:

B = Rear

K = Short side

# Specification text

Swegon's complete rectangular type COLIBRI Wall nozzle air diffuser for wall mounting with ALV commissioning box and the following functions:

- 100% flexible distribution pattern.
- Individually adjustable nozzles.
- Powder-painted and baked white finish, RAL 9003/NCS S 0500-N.
- Cleanable ALV commissioning box with removable commissioning damper, measuring method with low systematic error.

Size: COLIBRI Wc aaa-bbb with xx pcs  
ALVe aaa-bbb-ccc-d

Accessories:

Cover plate: ALVT 1e aaa-bbb-d xx pcs