

## To install the TBLZ-1-10-07 Cover holder COMPACT Unit, sizes 02-03

---

### **1. Application**


Holder for the upper inspection panel of the size 02 and 03 COMPACT units installed vertically. The kit contains 2 cover holders for installation in pairs.

### **2. Function**

Mechanical holder with automatic locking device for 10 different angles of aperture.

When the cover is completely open, the locking device releases automatically.

The cover must be closed completely in order to reengage the locking function. You can lower the cover one opening position at a time by pressing in the locking devices by hand.

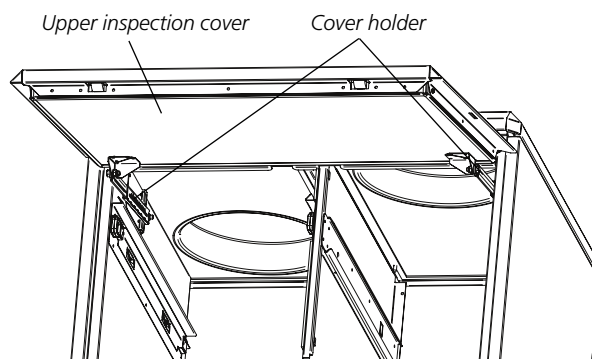

### 3. Installation

Dismantle the upper inspection cover.

Position the inner anchor plate as shown in Fig. 1. Mark 6 holes on the inner side of the air handling unit by using the inner anchor plate as a template and drill holes for the 4 mm blind rivets. Install an M8x20 screw on the inner anchor plate as shown in Fig. 3. Secure the inner anchor plate with blind rivets.

Position the outer anchor plate as shown in Fig. 2. Mark 6 holes on the inner side of the inspection cover by using the outer anchor plate as a template and drill holes for the 4 mm blind rivets. Secure the anchor plate with blind rivets.

Install the cover holder arm for the inner anchor plate as shown in Fig. 3; tighten the nut by hand.

Install the inspection cover onto the air handling unit; connect the cover holder arm for the outer anchor plate as shown in Fig. 3; tighten the nut by hand.

Check the assembly for correct operation. The cover holder should move easily without too much play. Tighten the nuts one more time or loosen them if needed.

