VIEW ON ARROW 'A'

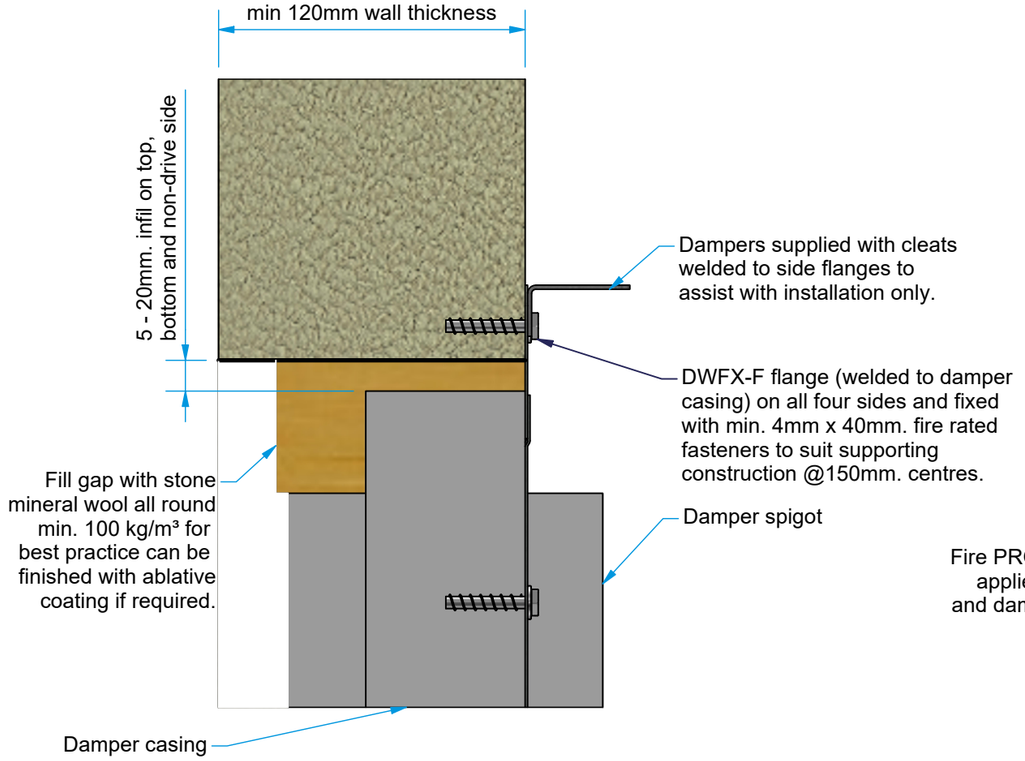

VIEW ON ARROW 'B'
(SIDE DETAIL)

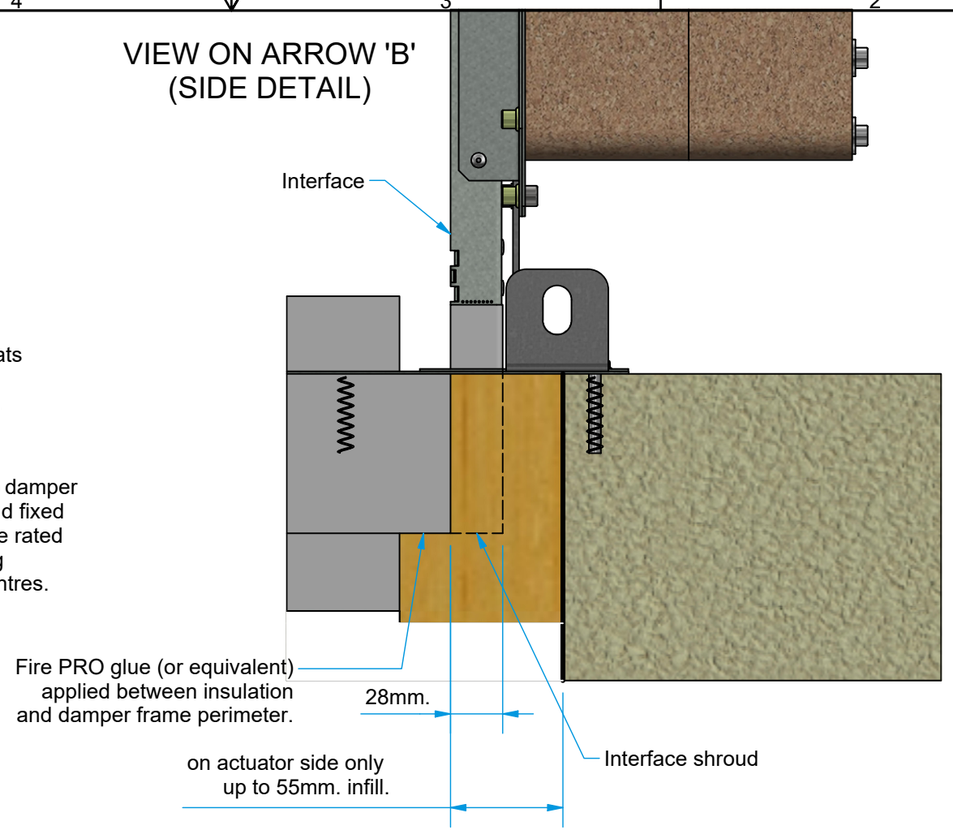

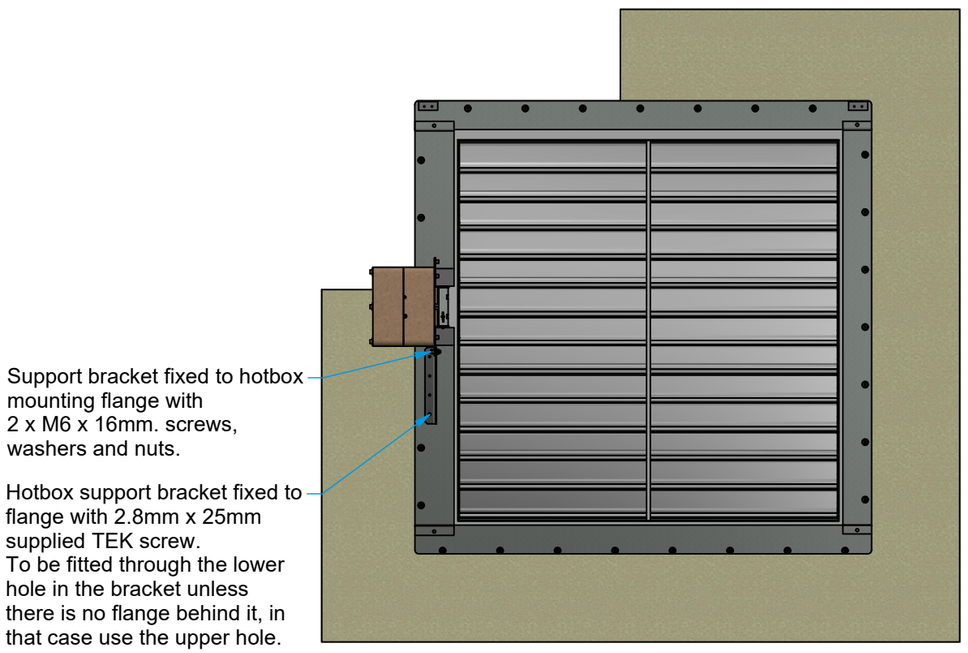

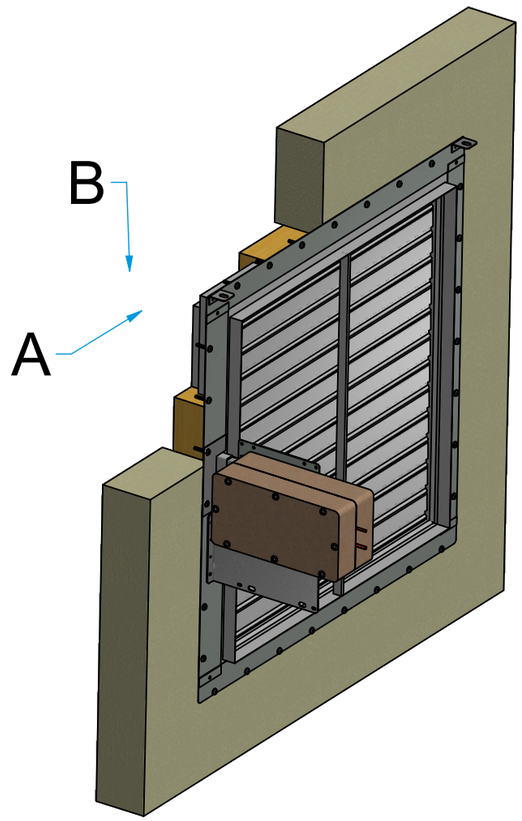

actionair by Swegon
© Swegon Air Management Limited
South Street, Whitstable, Kent CT5 3DU
Tel: +44 (0)1227 276100
Email: actionair@swegon.com
www.swegon.com/uk

Installation Detail

If your proposed installation details differ from that shown here, please discuss this with the authority having jurisdiction, referencing this documentation.

Deviation from this drawing requires approval of the relevant authority.

Connecting ductwork omitted for clarity. Ductwork must be independently supported.

A minimum of 200mm between fire dampers installed in separate ducts and 75mm between fire damper and construction elements/edges needs to be observed unless otherwise specified in the drawing.

SCAN ME

Please refer to the DoP for latest classifications for CE/UKCA compliance and the Installation, Operation and Maintenance Guide

Rev:	Comments:	By:	Date:
E	ECN2326	MJB	23-11-23
D	ECN2227	JPM	13/04/22
C	ECN1978	MJB	14-02-20
B	ECN1952	MJB	20-12-19
A	ECN 1945	MJB	14-08-19

Drawn By: M. Bushell	Date: 12/07/2019
Checked By:	Date:
Approved By:	Date:

Description:

VERTICAL APPLICATION

SMOKE COMMAND MCD DAMPER DWFX-F IN MASONRY/BLOCK WALL

Damper Size Range (mm)
200 x 200 to 1000 x 1000

Reference No:	Sheet	Rev
AAF12874	1 of 1	E