
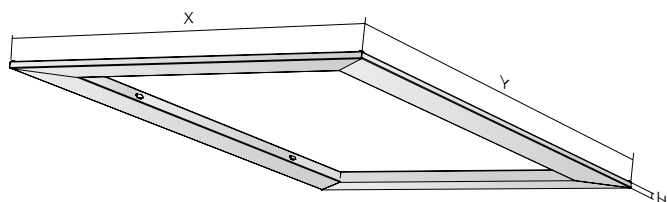


PARASOL Z CF

Installation of coanda frame

11/09/2024
Art. 942428095

Refers to coanda frame fitting PARASOL Zenith, PARASOL Zenith VAV, REACT Parasol Zenith and WISE Parasol Zenith

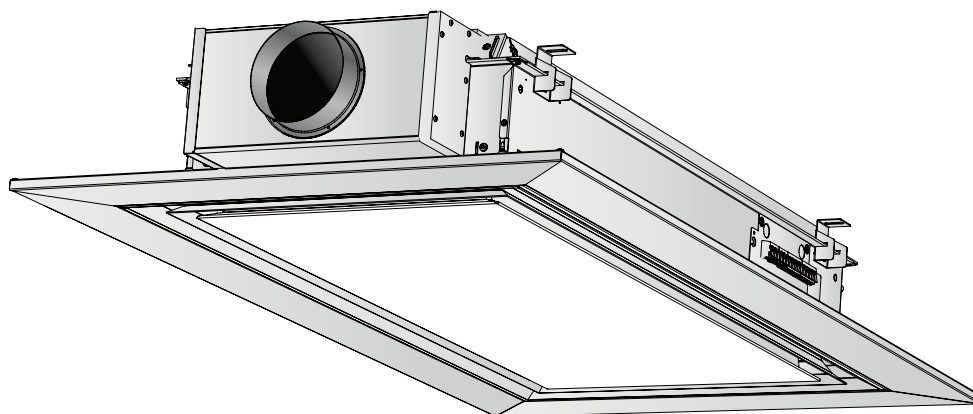

Product	X	Y	H
Size	mm	mm	mm
600	794	796	26
1200	794	1396	26
1800	794	1996	26

Product	Weight
Size	kg
600	2,226
1200	3,079
1800	3,937




Protective equipment

Always use appropriate personal protective equipment for the work in question, in the form of gloves, respirators, protective glasses and helmets during handling, installation, cleaning and service/maintenance.

Note: These instructions show a coanda frame mounted on a PARASOL Zenith 1200 with air connection on side 3. Depending on the size, the component parts on the right and the images in the instructions will vary slightly, but the number of parts and the method will be the same for all PARASOL Zenith variants.

For installation of the design kit, see separate installation instructions

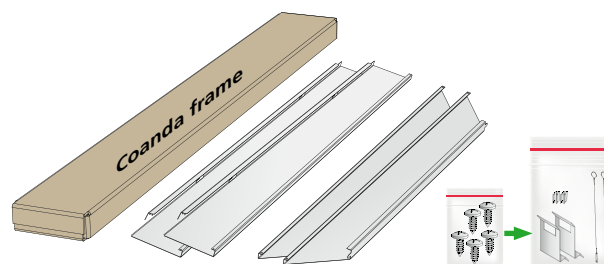

The packaging contains the following items

2 x long sides

2 x short sides

1 bag containing:

2 safety cords

2 clips


2 level holders

1 bag containing:


5 screws

Installation



Set out the long sides (a) and short sides (b) as illustrated.

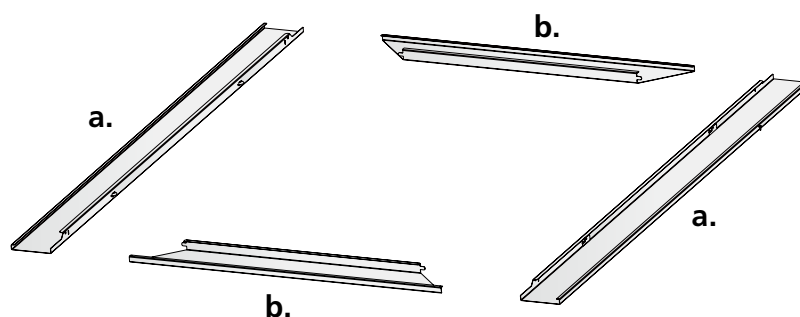

1. Bring all four corners together and make sure that the entire tab protrudes through the hole
2. Make sure that the long side with the small hole is pushed in under the short side with the larger hole

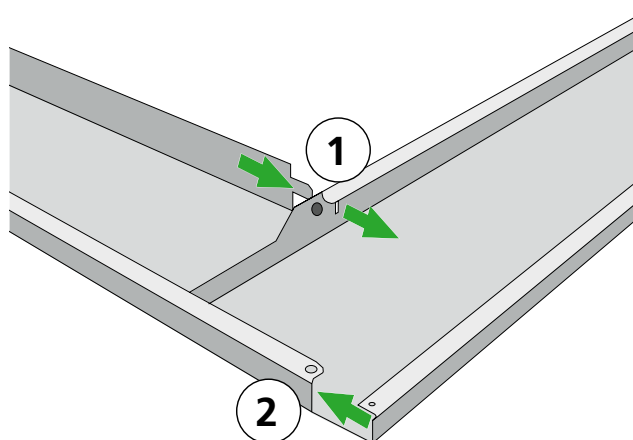


3. Screw all four corners together with one screw in each
4. Fold in the tabs in all four corners
5. Attach a safety cord in the hole in two diagonal corners

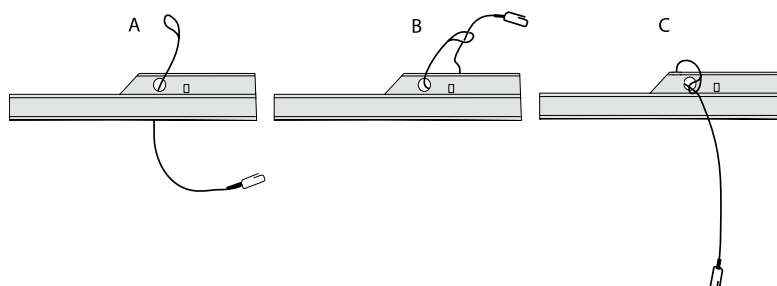
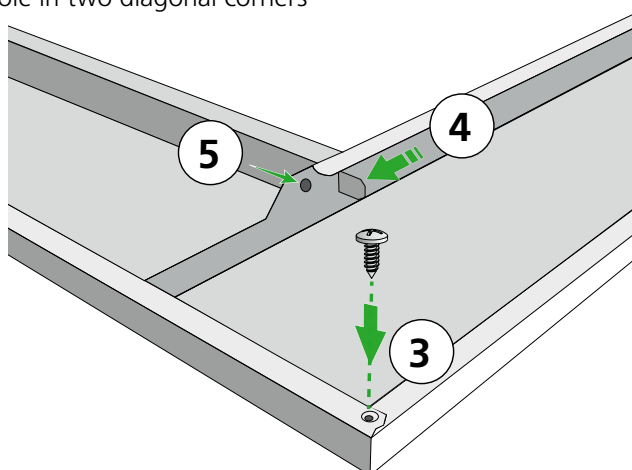


6. place a level holder centred on each long side.

(Note: When the design kit is installed on the product, level holders do not need to be installed)

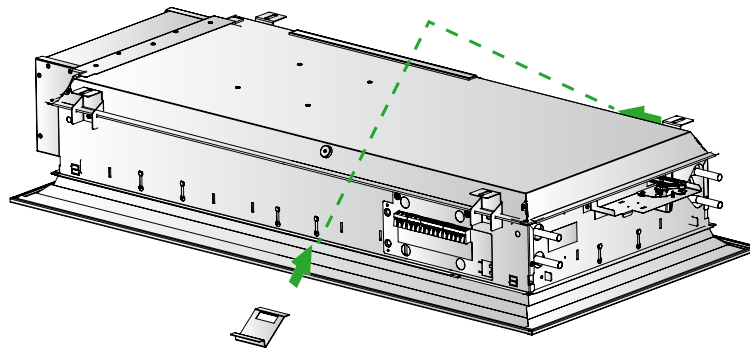


7. Secure both level holders with the enclosed clips

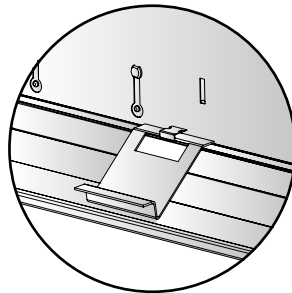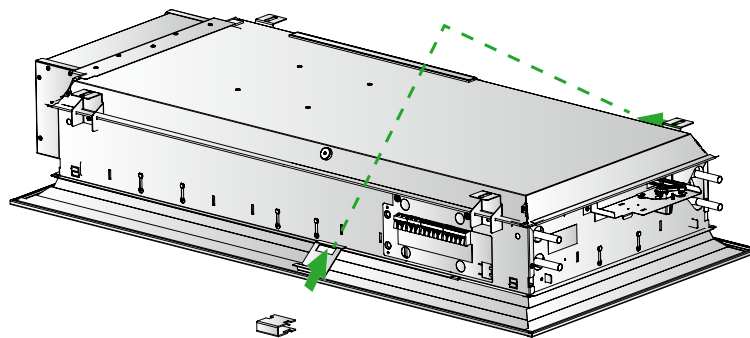

Coanda frame PARASOL Z CF

8. Raise the coanda frame and first hold hooks A and C at the same time as the coanda frame is pressed into place, then hold hooks B and D, raise and press the other side of the coanda frame until you hear a click.

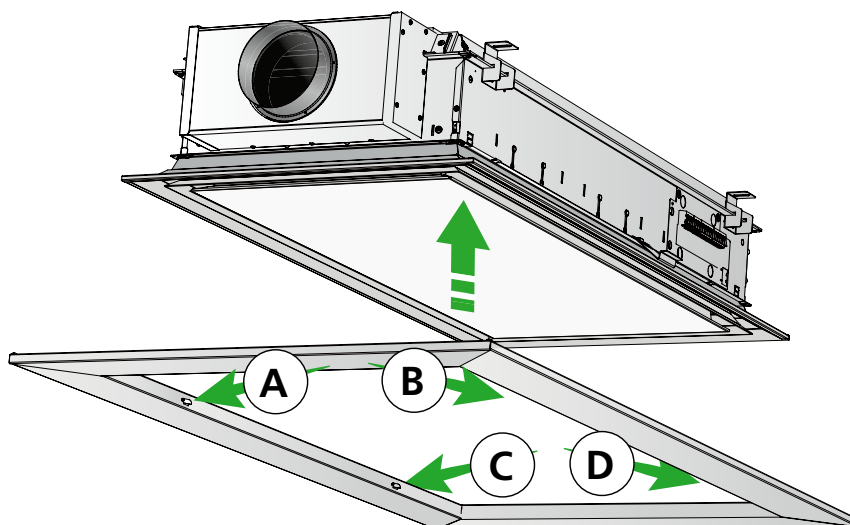

9. Finally anchor the other ends of the two safety cords in the intended holes, diagonally on the product. When the design kit is mounted, it may help to slide the design kit towards the other short side to give more space when attaching the safety lines. Then center the design kit again when both safety lines are in place.

