
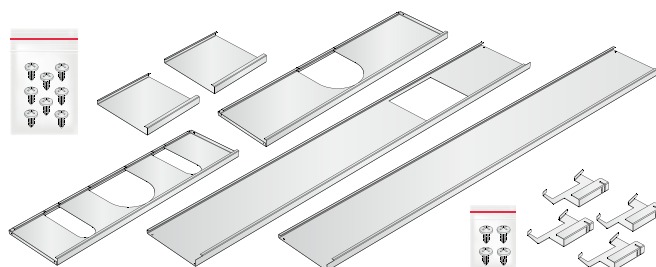
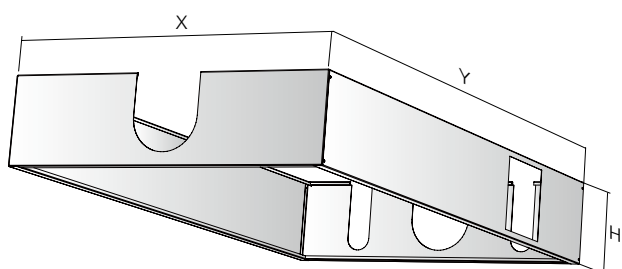


PARASOL Z DK

Installation of design kit

11/09/2024
Art. 942428094

Refers to design kit fitting PARASOL Zenith, PARASOL Zenith VAV, REACT Parasol Zenith and WISE Parasol Zenith

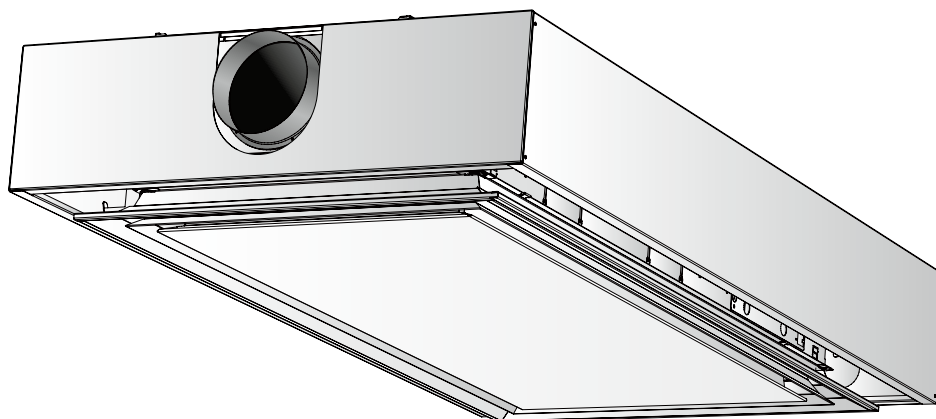

Product	X (mm)	Y (mm)	H (mm)		
Size			ø 125	ø 160	ø 200
600	713	715	188	218	
1200	713	1315	188	218	
1800	713	1915			259

Product	Weight (kg)		
Size	ø 125	ø 160	ø 200
600	3,931	4,287	
1200	5,249	5,775	
1800			8,398

The packaging contains the following items

2 x long sides

2 x short sides

2 x cover plates

4 x mounting brackets

1 bag containing:

8 screws for installation of panel sides

4 screws for installation of brackets

Contents

Installation (applies to both installation options) 3

For installation carried out by one fitter 4

For installation carried out by two or more fitters 6




Protective equipment

Always use appropriate personal protective equipment for the work in question, in the form of gloves, respirators, protective glasses and helmets during handling, installation, cleaning and service/maintenance.


Note: These instructions apply to the design kit installed on a PARASOL Zenith 1200 with cooling and heating and air connection on side 3. Depending on the product, size, function and selected air connection side, the component parts on the right and the images in the instructions will vary slightly, but the number of parts and the method will be the same.

Installation (applies to both installation options)

1. Install four brackets with the grooves facing the product's pressed edge

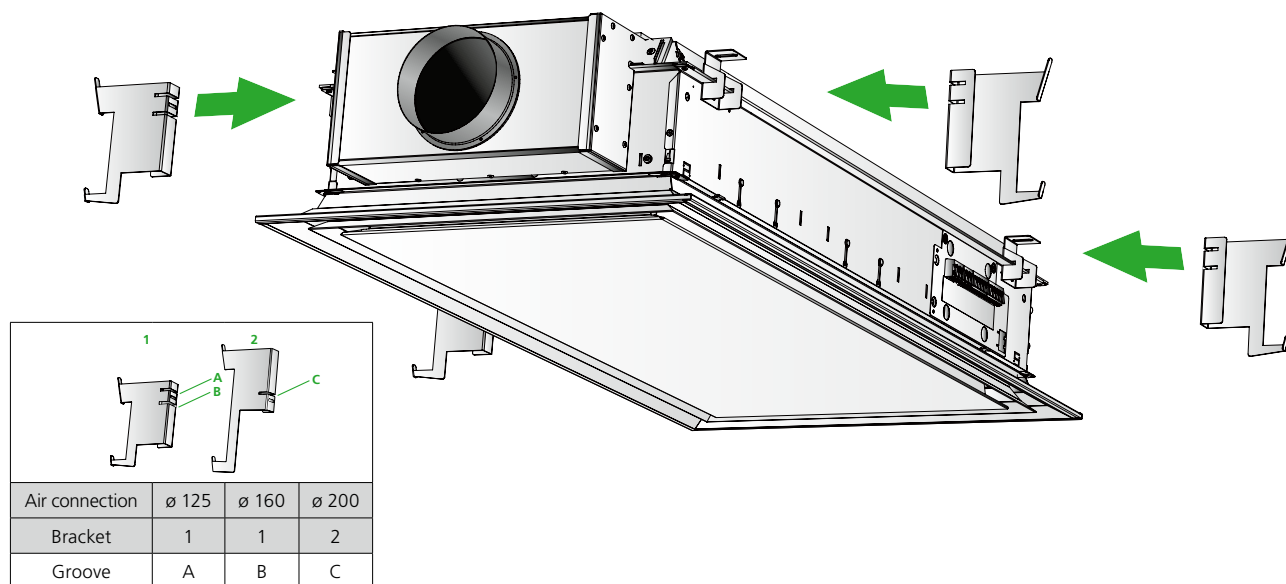


2. Select groove A for product with air connection ø125, groove B for air connection ø160. The larger bracket with groove C is used for air connection ø200. Screw all four brackets into place with one screw in each.

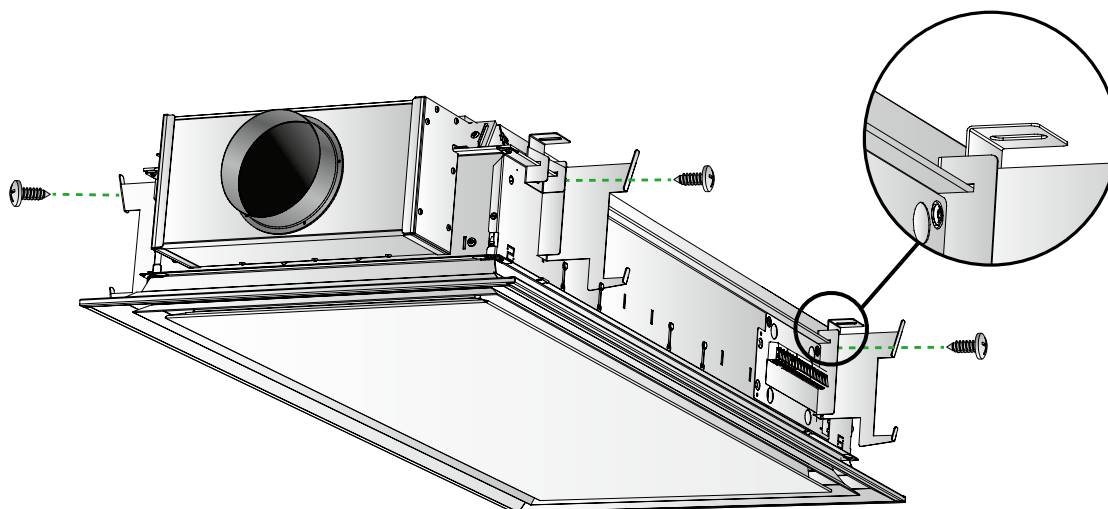


For installation carried out by one fitter

If you are working alone, it is easier if you install the parts individually.


3. Raise the two long sides

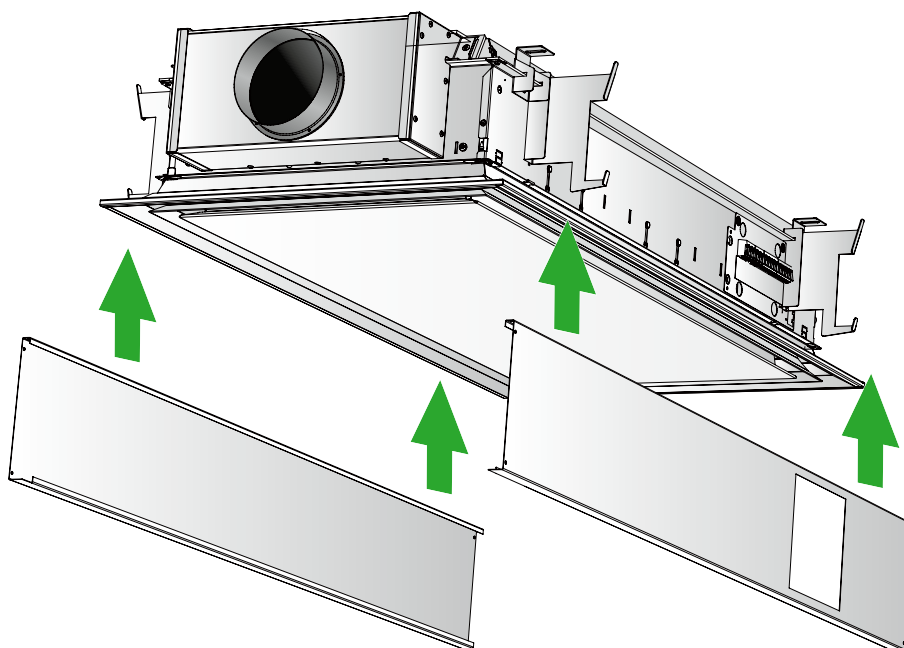


4. Hook the two long sides into the bracket

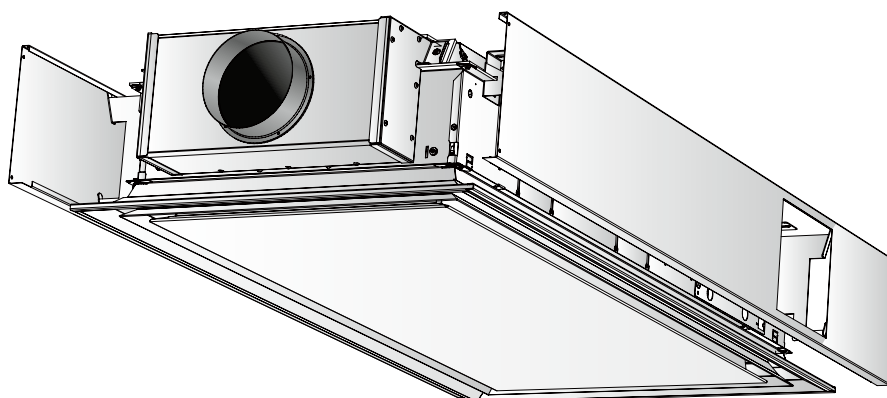


5. Remove the stays that are in the way of the product in question by gently wiggling them.
(In our example with a PARASOL Zenith with cooling and heating, air connection on side 3 and water connection on side 1, we remove the stay for the air connection on side 3 and for the water connection on side 1 as illustrated below.)
6. Then raise one short side at a time and ensure that the ends of the short sides are placed on the inside of the long sides

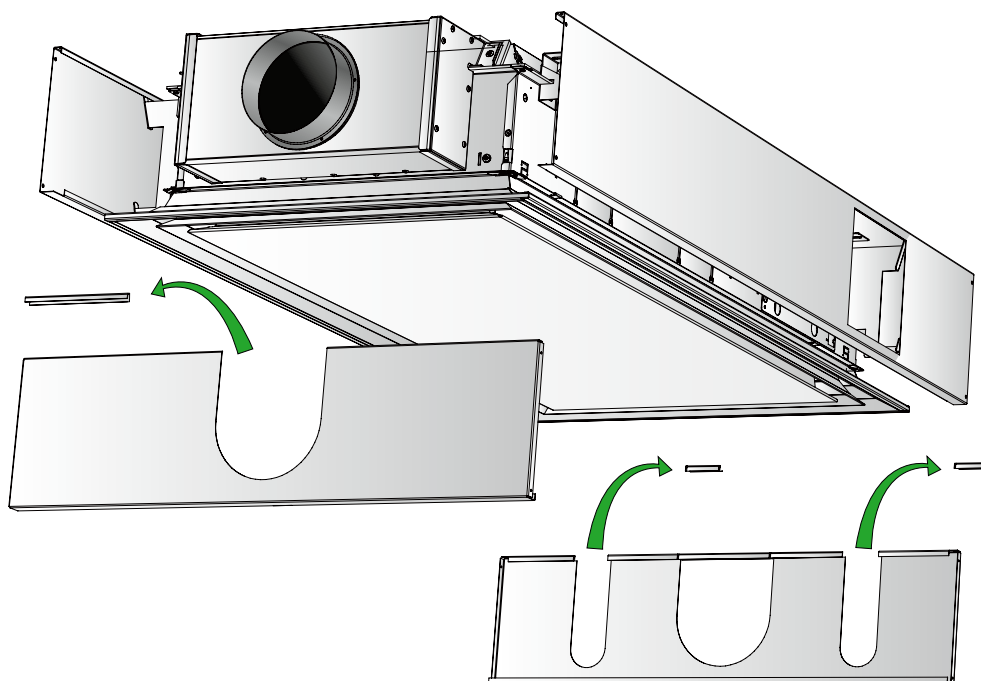

7. Screw the long and short sides together with two screws in each corner. Use a Phillips screwdriver and tighten to 2 Nm

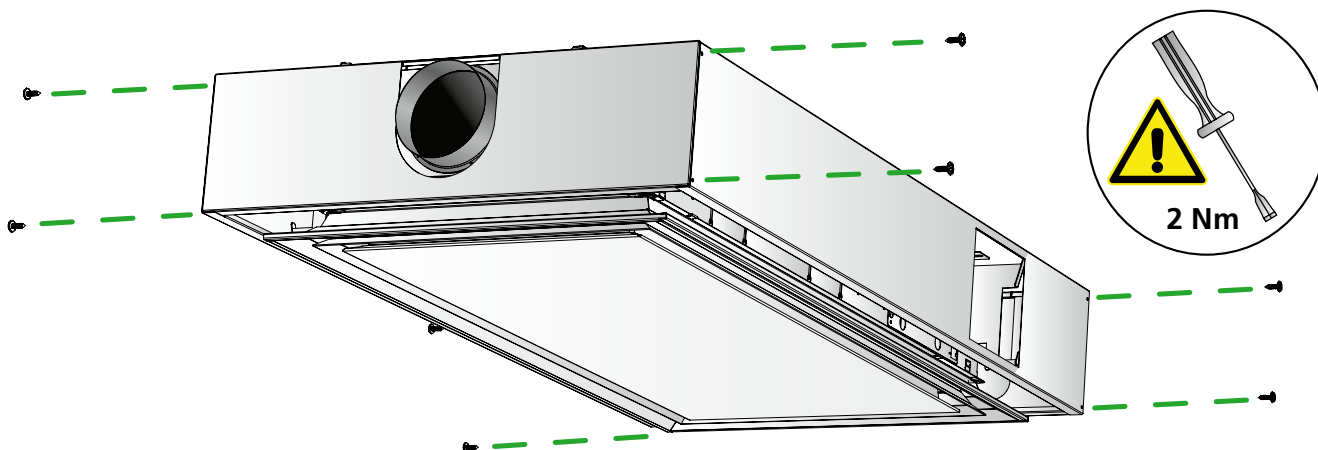


8. Install cover plates

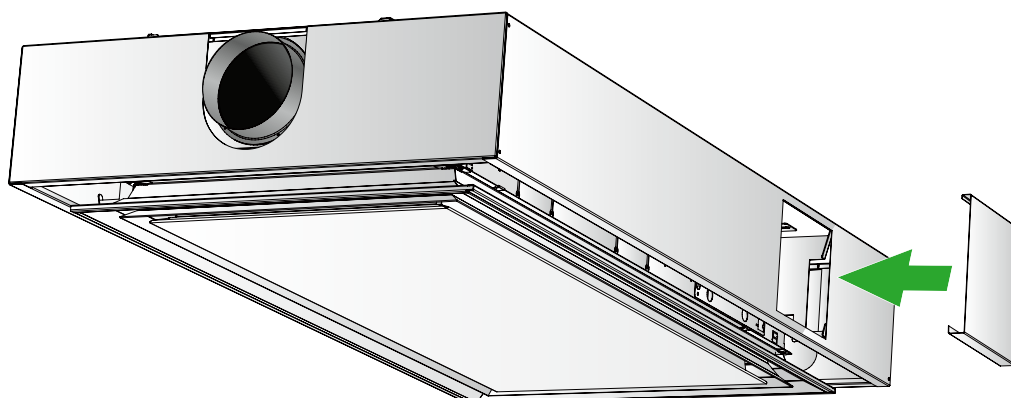


For installation carried out by two or more fitters

If there are two of you, it is easier if you assemble the design kit before you lift it into place.


9. Remove the stays that are in the way of the product in question by gently wiggling them.
(In our example with a PARASOL Zenith with cooling and heating, air connection on side 3 and water connection on side 1, we remove the stay for the air connection on side 3 and for the water connection on side 1 as illustrated below.)

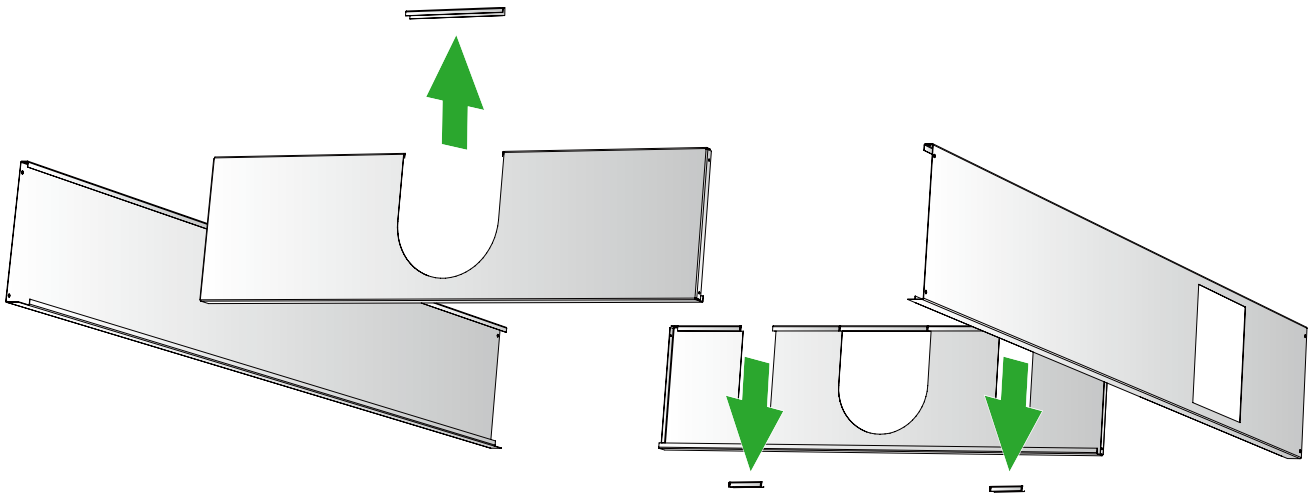


10. Move the four sides together and ensure that the ends of the short sides are placed on the inside of the long sides

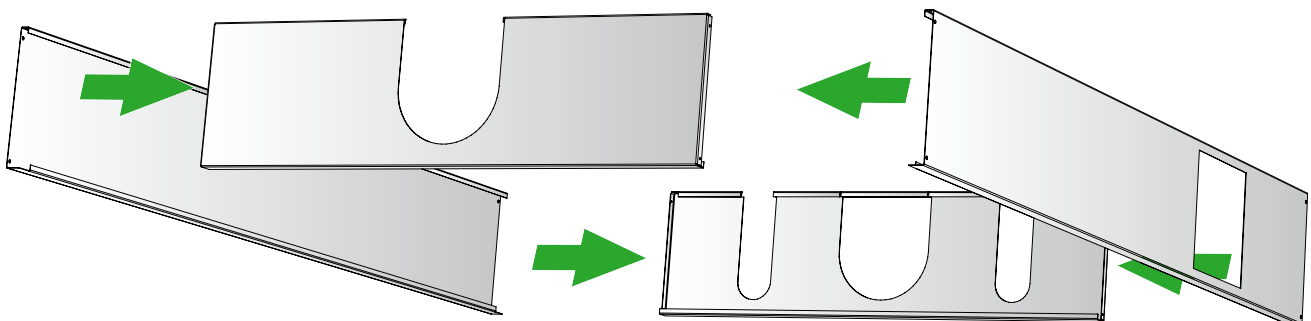


11. Screw the long and short sides together with two screws in each corner. Use a Phillips screwdriver and tighten to 2 Nm

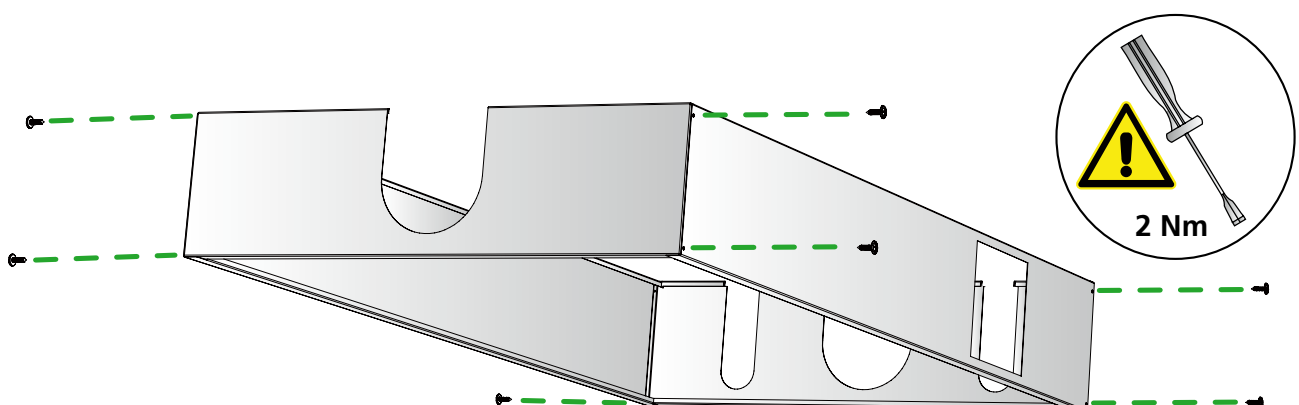

12. Raise the assembled design kit and hook it onto the brackets.

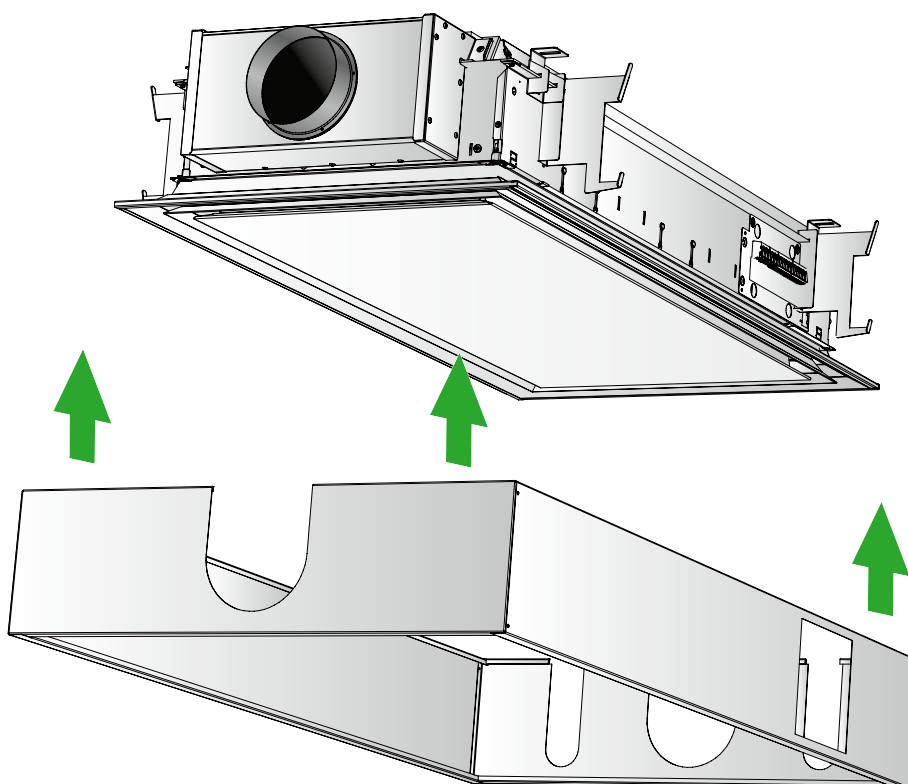

13. Install the cover plates

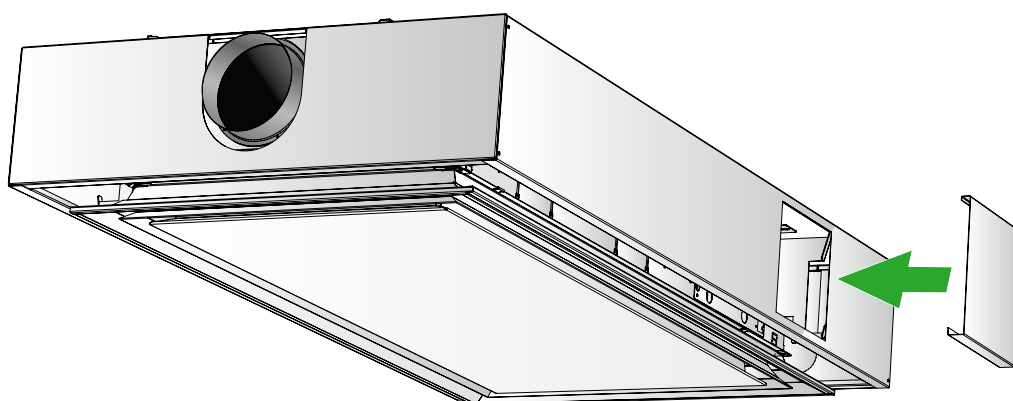

For installation of the coanda frame, see separate installation instructions.

