

PARASOL Z HG

Cleaning - foldable coil

22/01/2026
Art. 942428108

Refers to foldable coil on PARASOL Zenith, PARASOL Zenith VAV, REACT Parasol Zenith and WISE Parasol Zenith



Protective equipment


Always use appropriate personal protective equipment for the purpose, in the form of gloves, respiratory protection, protective goggles and helmet when handling, installation, cleaning and service/maintenance.




For cleaning chilled beams, pH-neutral cleaning agents should be used, typically within pH 6.5–7.5, to avoid damage to materials such as aluminum, copper, and aluzinc. For spot disinfection, an alcohol-based disinfectant is recommended, such as ethanol or isopropanol (≈70%), which is effective and gentle on materials.

The use of strong cleaning agents or disinfectants that are highly alkaline (high pH) or acidic (low pH) may cause corrosion or material damage. If such agents are required, Swegon should be consulted before use.


1. Fold down the face plate by gripping both corners of the short sides and pulling the bottom panel straight out.

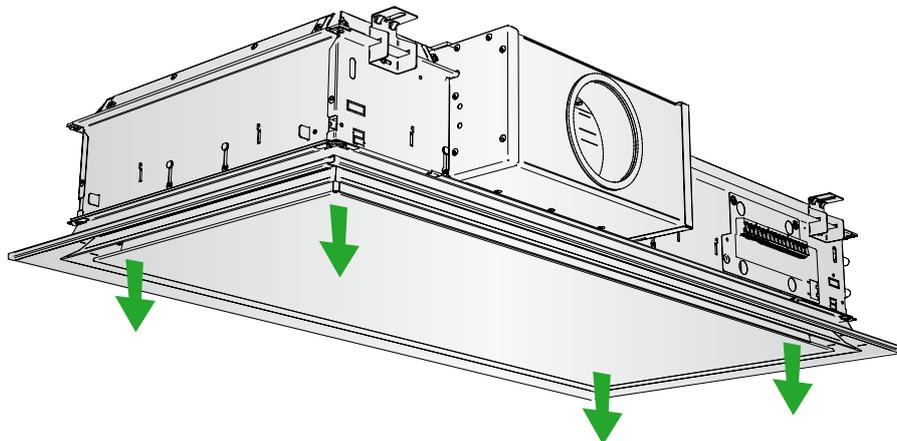


2. Let the face plate hang in two safety wires during cleaning.
Make sure to lower the coil on the correct short side where no water pipes protrude.

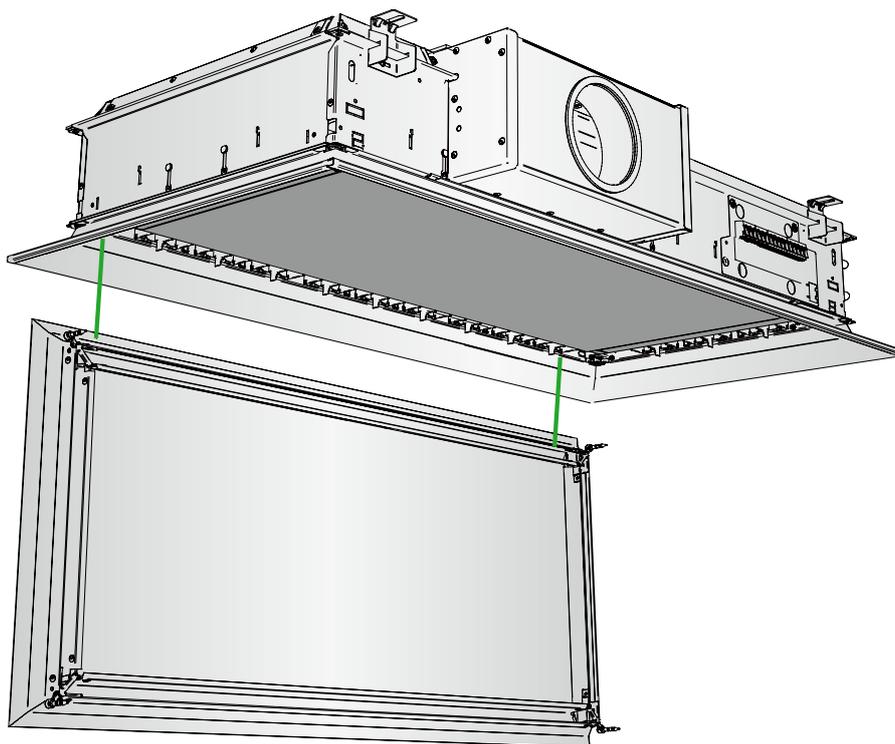


3. Loosen the screws that lock the coil in a fixed position. Loosen only a few turns.

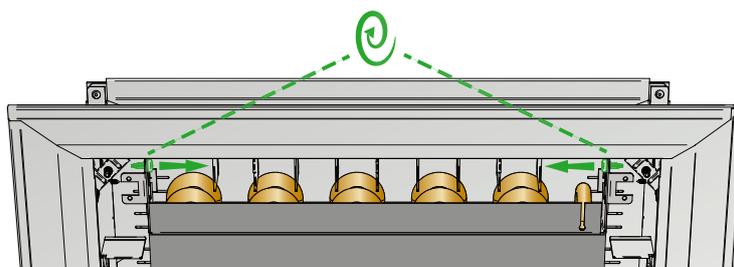


4. Grip the bracket (see images) and slide the coil bracket away from the short side so that the coil comes loose.
5. Perform the same action on the other corner of the short side.

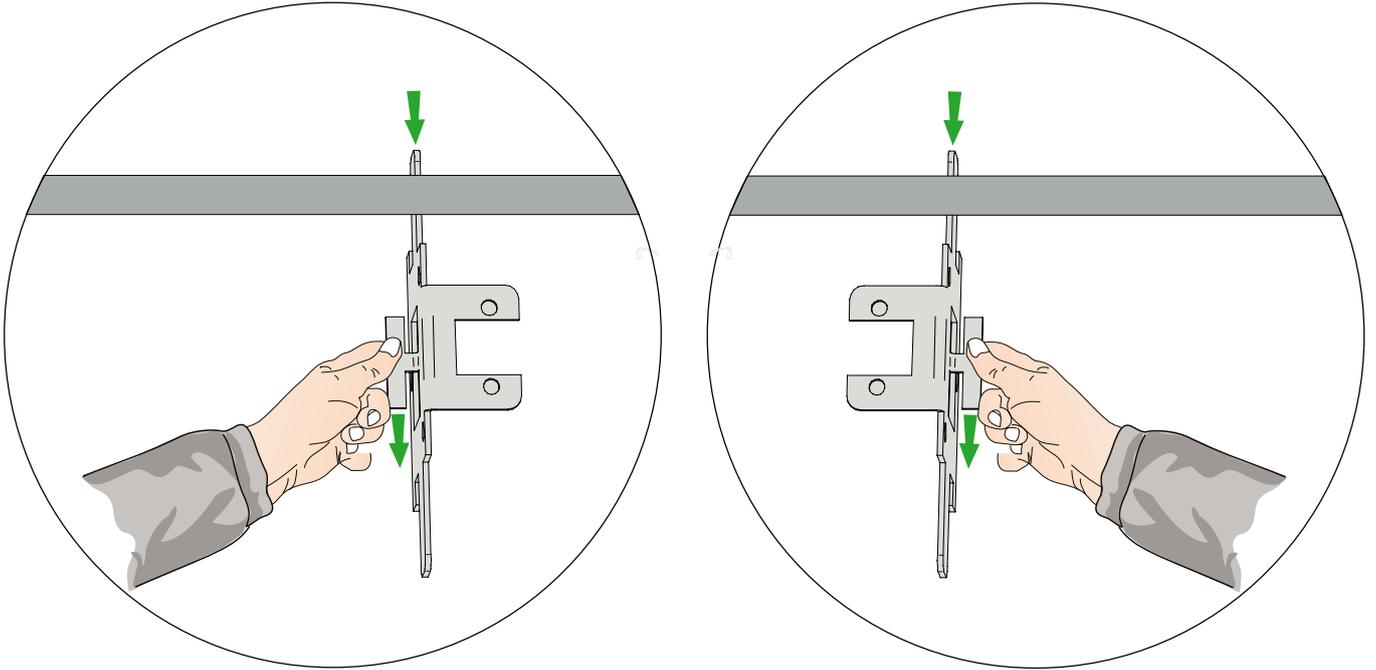


6. Vacuum the top/bottom side of the coil as well as the slots using a suitable nozzle

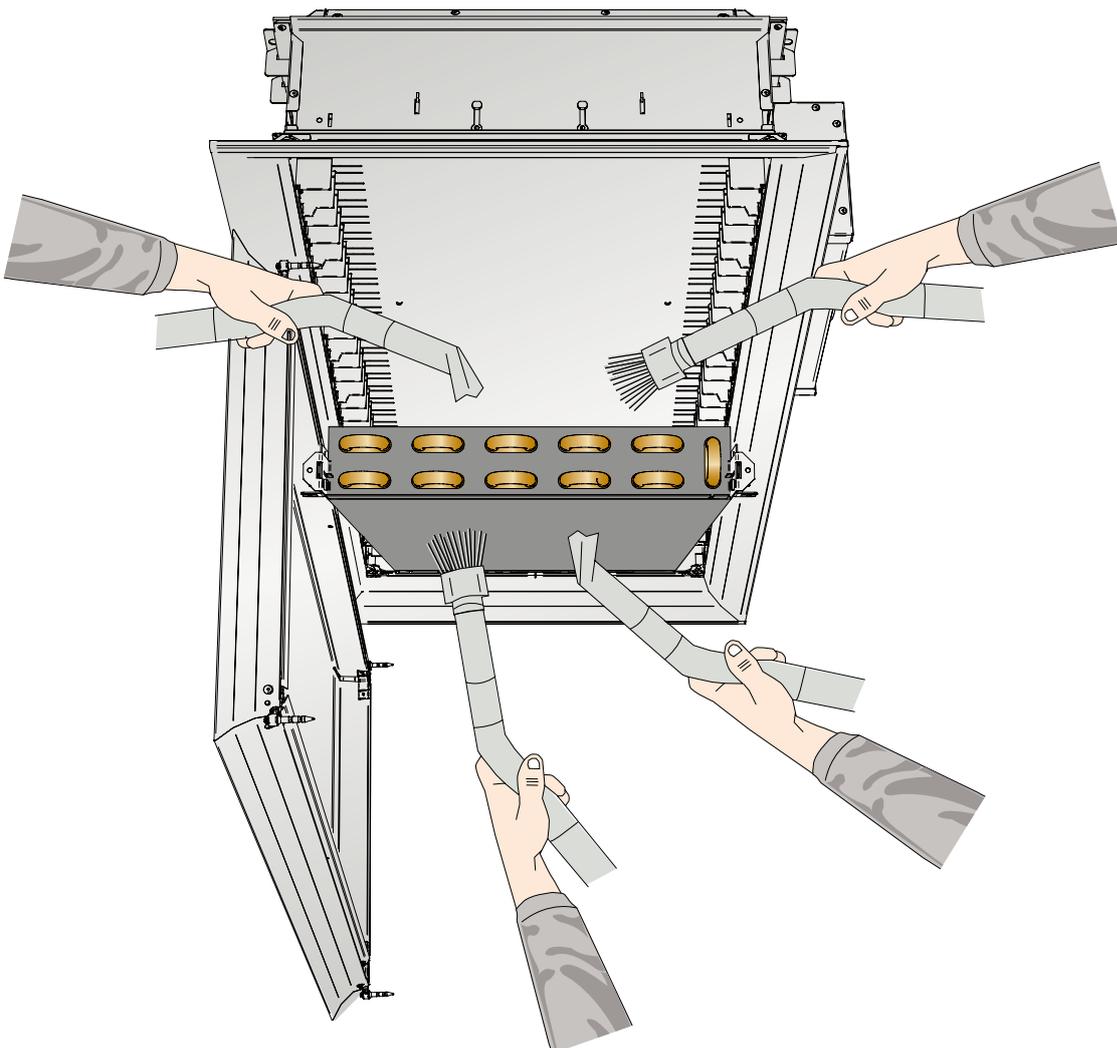


7. Raise the coil

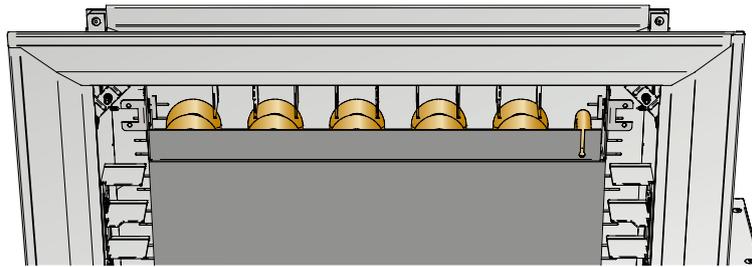


8. Grip the bracket (see images) and slide the coil bracket toward the grooves in the short side so that the coil is secured in the product.

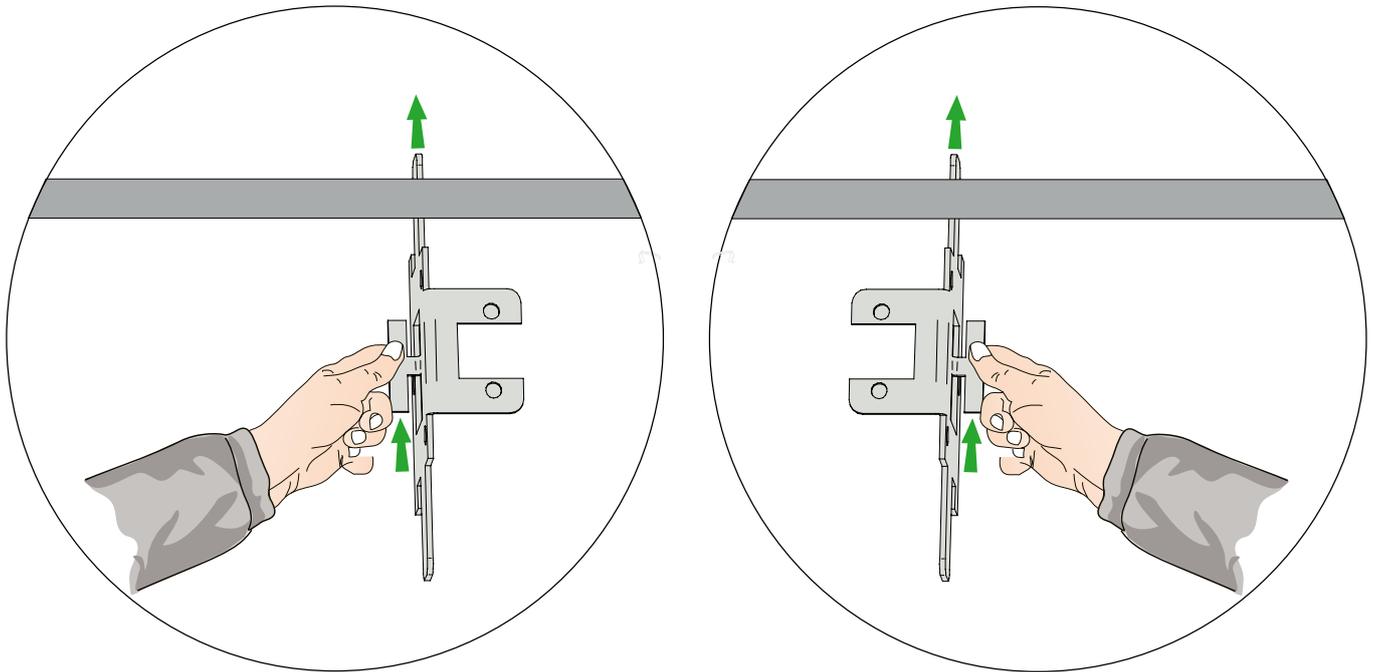

9. Tighten the coil bracket screws.

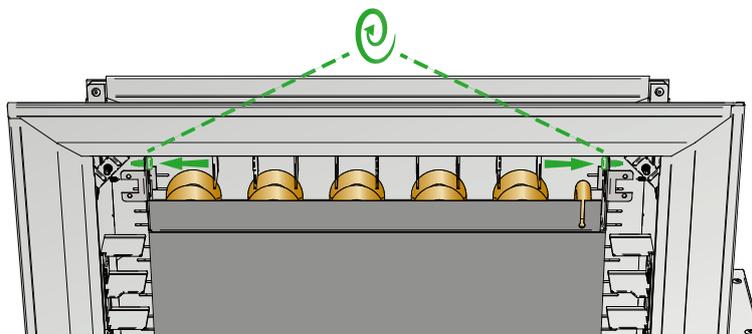

10. Clean both sides and edges of the bottom panel with a damp cloth. Use only water or mild soapy water.

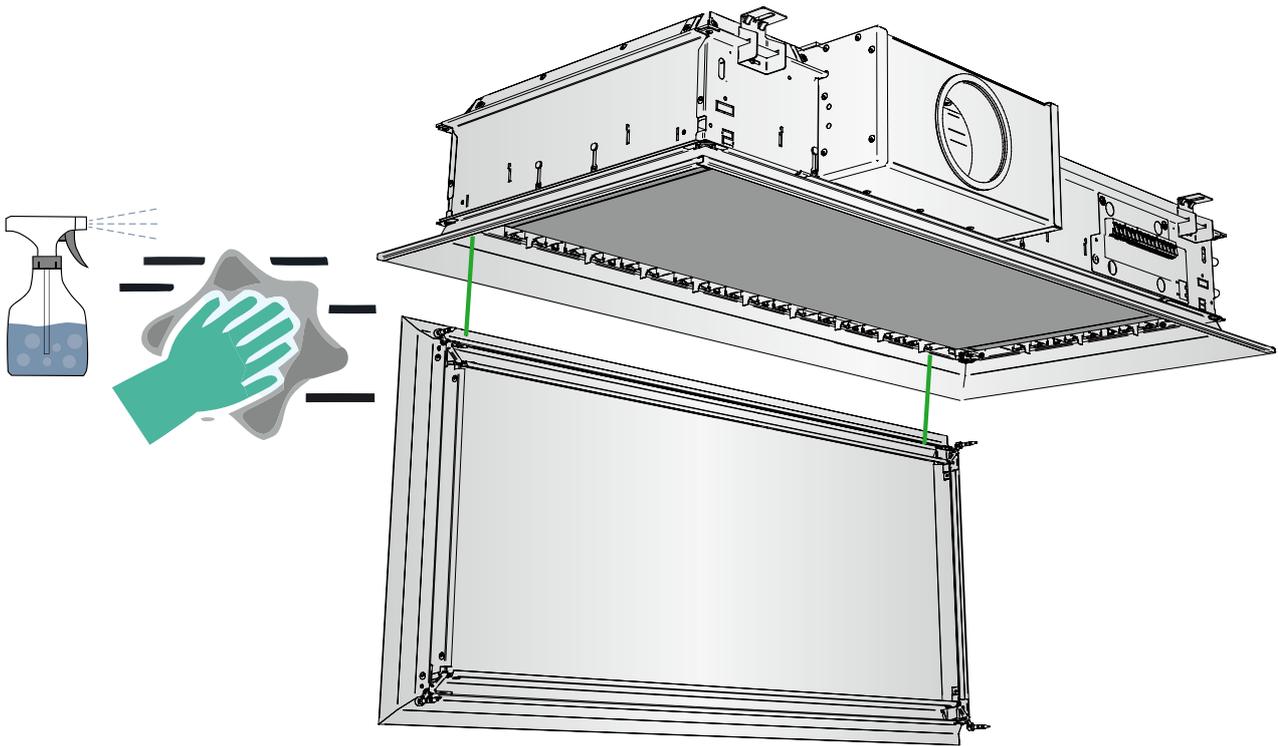

11. Reattach the safety wires
12. Fold up the face plate by pressing in all four corners.

